



**DIAMONDBACK**

DiamondBackCovers.com / 800 935 4002

**CROSS BIN**

WITH DIAMONDBACK HD & SE

# INSTALLATION GUIDE

AX-4

**10 minutes**  
Normal install time

Keep an eye out for these icons:

**! IMPORTANT!**  
Important installation information

**★ Helpful Hints**  
Tips to assist installation

## PARTS INCLUDED:



13" Cross Bin

or



8" Cross Bin

## PRE-INSTALLATION NOTE:


Install your DiamondBack cover before installing the Cross Bin.

## INSTRUCTIONS

**1** Open the cab panel of the cover. Detach the tops of its gas springs. Fold it completely back until it rests on the closed portion of the cover.

**2** Set the gas springs upright so that you'll be able to reattach them to the cab panel after installing the bin.


**3** Place the **bin** into the cargo bed so that its support flanges rest on the bed rails.

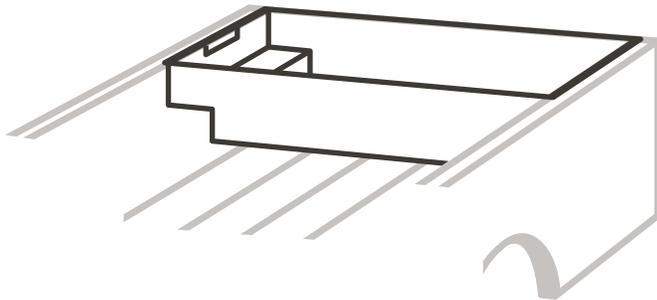

**★** Many pickup truck cargo beds are tapered, which means that many Cross Bins have a front and back. If your bin appears to not fit, rotate it 180° and try again.


**4** Move the bin as far forward as possible.

**5** Optional: For bumpy driving conditions, fasten the bin to the bed rail lips using self-drilling sheet metal screws.

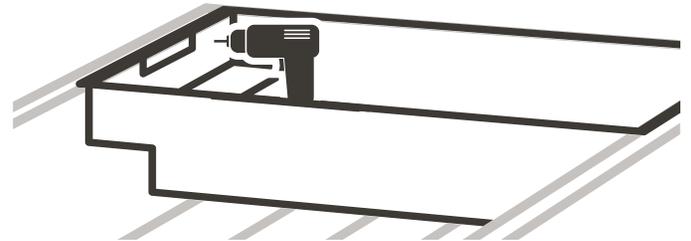

**6** Fold the cab panel back into place and reattach its gas springs.

**!** To avoid hinge damage, make sure the hinges are fully mated before bringing the cab panel back into position.

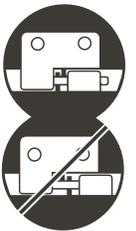

**7** If you just installed the bin under a DiamondBack cover you've had for a while, you may find that your cab-panel lock rods are now more difficult to operate. If so, use the rod guide brackets and a 7/16" socket to lower the rods slightly.



**DIAMONDBACK**

DiamondBackCovers.com / 800 935 4002

**CROSS BIN**  
WITH DIAMONDBACK 270 & 180

# INSTALLATION GUIDE

AX-4

**20 minutes**  
Normal install time

Keep an eye out for these icons:

**IMPORTANT!**  
Important installation information

**Helpful Hints**  
Tips to assist installation

## PARTS INCLUDED:



13" Cross Bin

or



8" Cross Bin


## PRE-INSTALLATION NOTES:

If your DiamondBack cover is already installed, you must detach and slide the cover back about two feet to allow room for you to install the Cross Bin.

If you haven't yet installed your DiamondBack cover and it came with lock rod striker brackets, a clamp bracket, or a bulkhead angle, you should install those prior to installing the Cross Bin.

## INSTRUCTIONS

- 1** Place the **bin** into the cargo bed so that its support flanges rest of the bed rails.

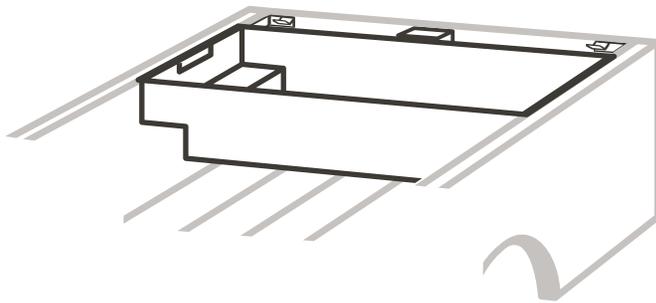

Many pickup truck cargo beds are tapered, which means that many Cross Bins have a front and back. If your bin appears to not fit, rotate it 180° and try again.

- 2** Finish installing or re-installing the DiamondBack cover.

With the bin in place, you won't be able to attach the front clamps or adjust the cab-panel lock rods of your cover from inside the truck as instructed. You'll need to do this from the side of the truck, which will take additional time.

- 3** Move the bin as far forward as possible.

- 4** Optional: For bumpy driving conditions, fasten the bin to the bed rail lips using self-drilling sheet metal screws.

