


Alternative Brackets for Ford Sport Trac 2007-



SUPPLEMENT to INSTALLATION INSTRUCTIONS

- 1.** Before any installation, locate and remove 6mm screws and washers from Sport Trac bed wall in four corners as shown.

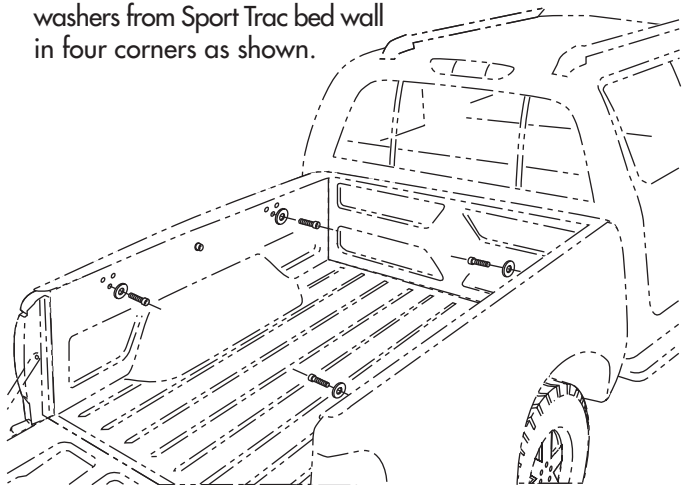


for CLASSIC, BLACKMAX and TUFFTONNO TONNOS

- 2.** Attach Clamping Bracket using the 6mm screw in the lower exposed hole.

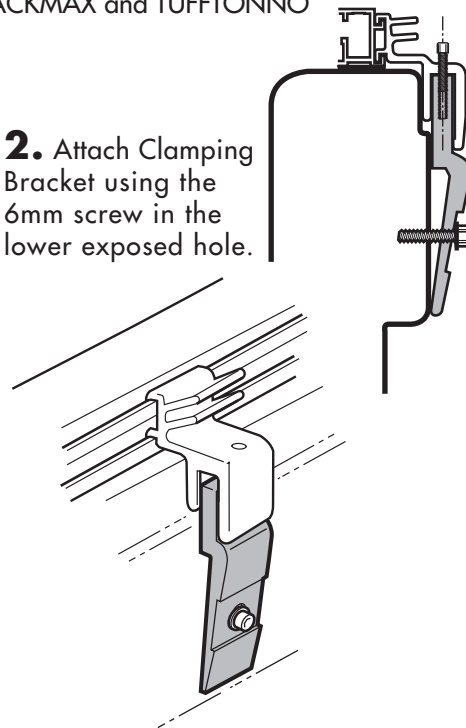
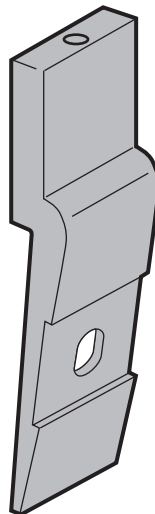


INSTALLATION for FULLTILT TONNO and FREEDOM EZ TILT TONNO

- 2.** Attach Clamping Bracket using the 6mm screw in the lower exposed hole.

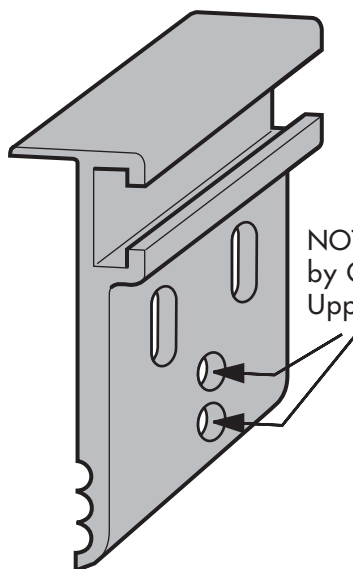

NOTE: Use Lower Hole by Gate and Upper Hole by Cab

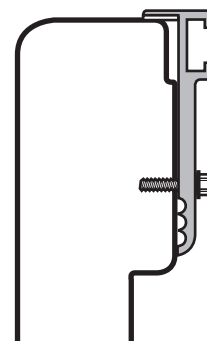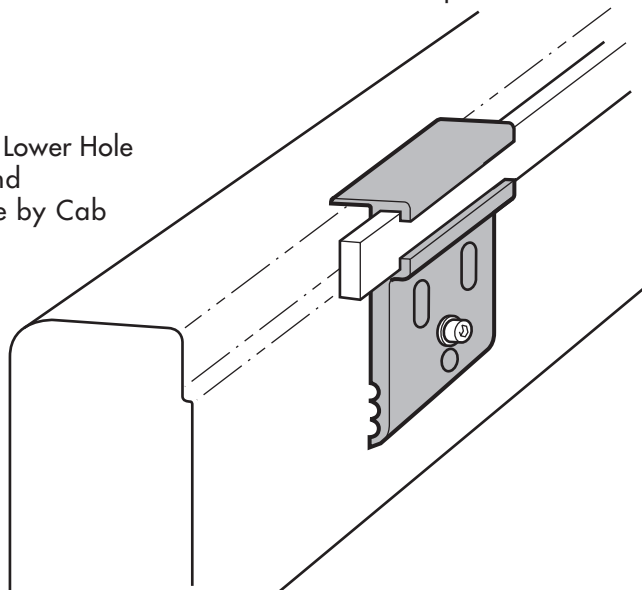

extang
AMERICA'S BEST
SELLING TONNEAUS

Extang Corporation
1901 E. Ellsworth Rd.
Ann Arbor, MI 48108
734 677-0444, Fax: 734 677-8409

Register your warranty at:


www.extang.com

Item No. 0185-0808 RH Printed in U.S.A.



Alternative Brackets for Ford Sport Trac 2007-

SUPPLEMENT to INSTALLATION INSTRUCTIONS


INSTALLATION for EXPRESS TONNO

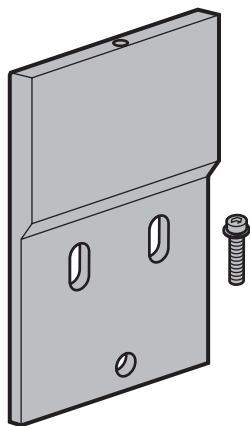



2. Attach Clamping Bracket using the 6mm screw in the lower exposed hole.

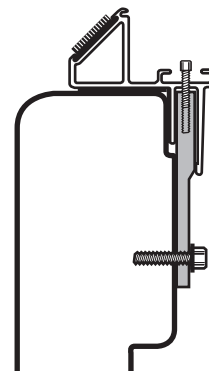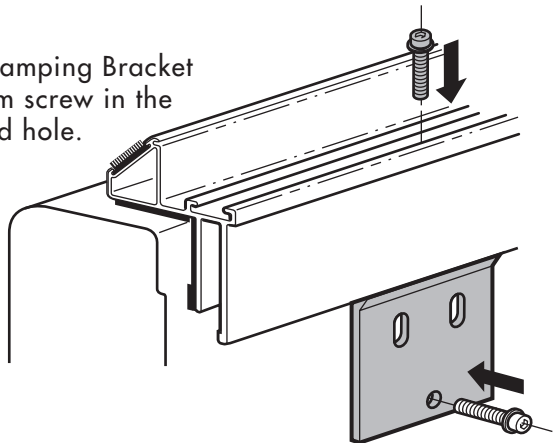





INSTALLATION for REVOLUTION TONNO

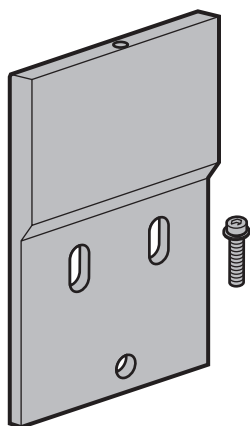

2. Attach Clamping Bracket using the 6mm screw in the lower exposed hole.

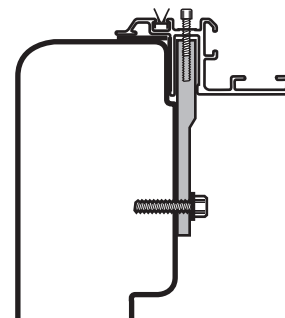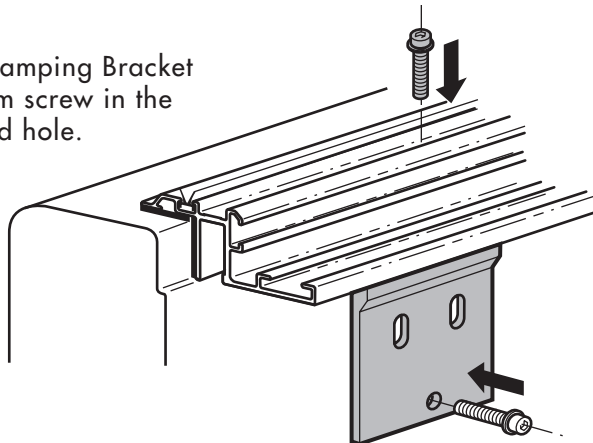

INSTALLATION for EXTANG RT TONNO

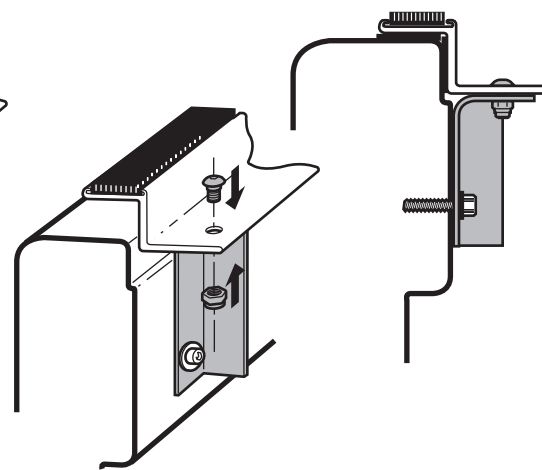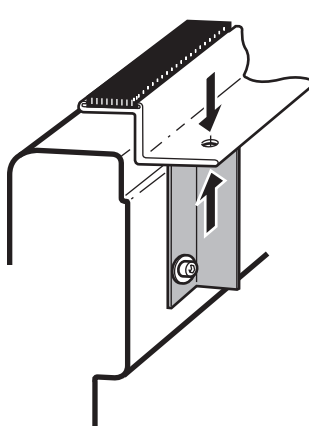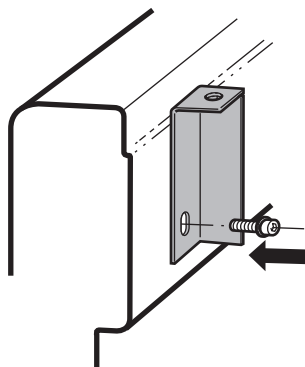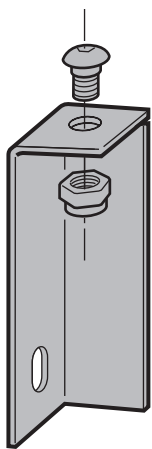

extang
AMERICA'S BEST
SELLING TONNEAUS

Extang Corporation
1901 E. Ellsworth Rd.
Ann Arbor, MI 48108
734 677-0444, Fax: 734 677-8409

Register your warranty at:

www.extang.com

Item No. 0185-0808 RH Printed in U.S.A.