
INSTALLATION SHEET-GM/Chevy Composite Box









PARTS INCLUDED IN YOUR KIT. You may want to lay them out in this manner for accessibility.

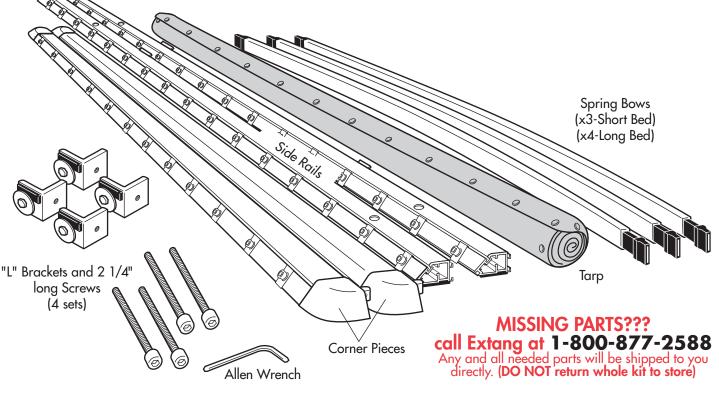




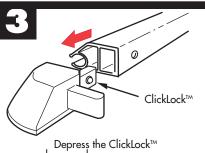


Depress the ClickLock™ release and remove one corner from cab rail.

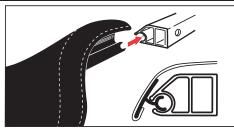



Feed tarp dowel into cab rail. (NOTE: For easiest feeding action, place tarp on a flat smooth surface, and keep dowel straight while feeding into cab rail. Caution, pavement may scuff tarp.)

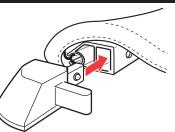



Reinsert corner piece into cab rail until it "clicks" and locks into place.

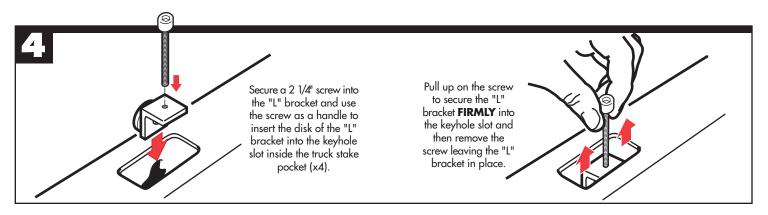


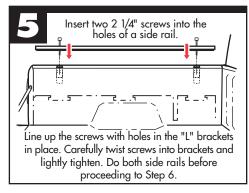

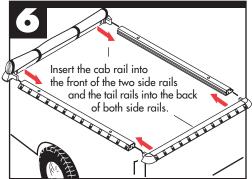

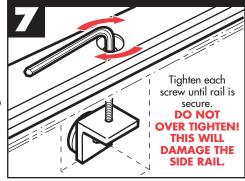

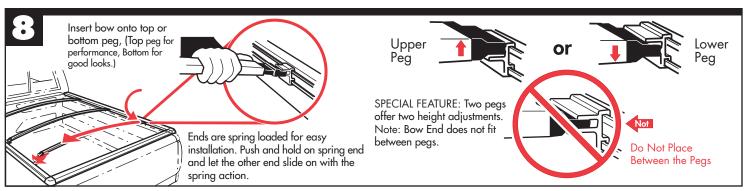

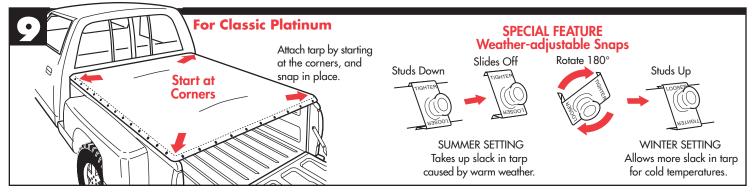



Tarp may be rolled up and secured with Velcro® for bulk hauling

To Keep Your CLASSIC **ATINUM**

tonno looking great! Clean with Mild Soap and Water ONLY

Use EXTANG's **TONNO TONIC**TM—specially formulated for vinyl tonno covers. It cleans, protects, and beautifies in a simple one-step application.

Use of vinyl conditioners (such as Armor All) will void your tonno warranty!

