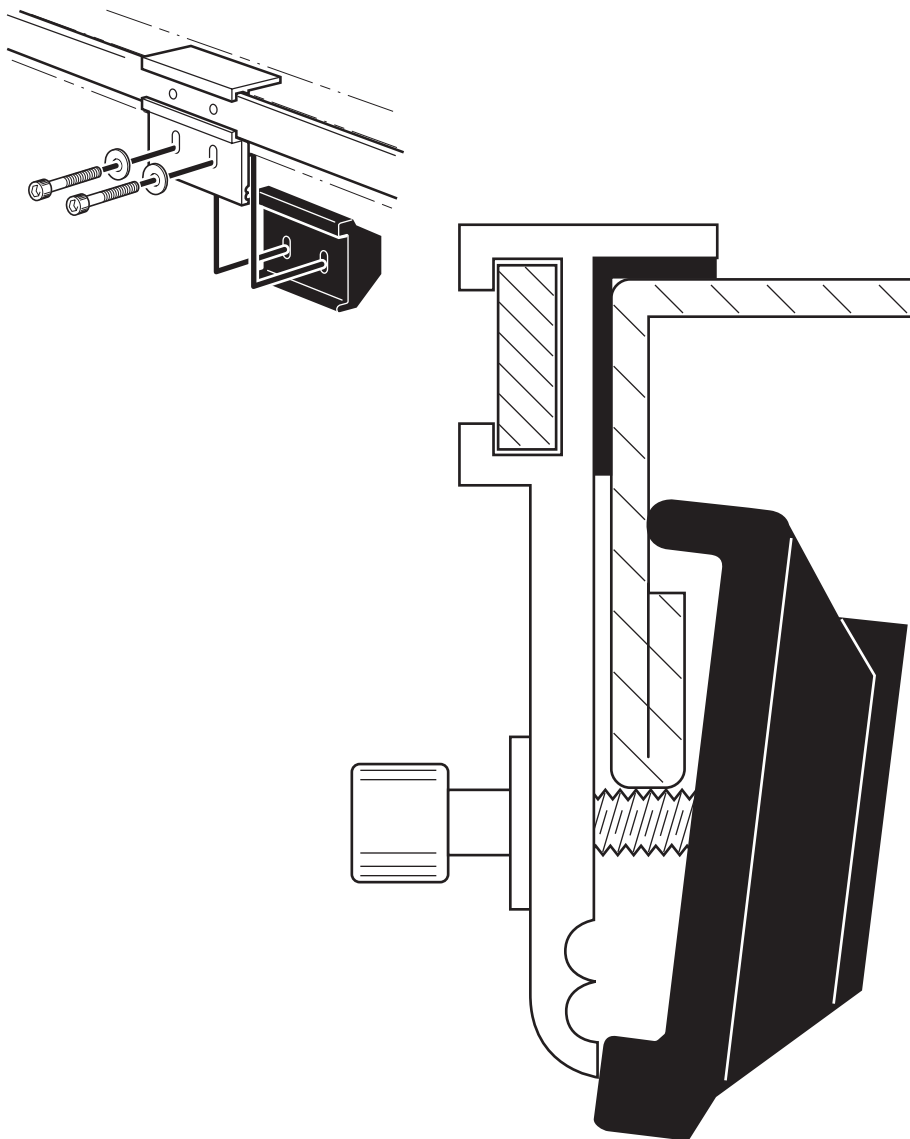


Replace Step 6 instructions with the following:

**6**

Attach clamp to each side bracket with two clamp bolts.

Clearance between bracket bolt and side wall rim the round bead does not fit in the bracket grooves. Invert the clamp so that the square bead contacts the lower lip of the bracket. It will rest securely on that edge.

**Do not tighten at this step.**