



# TRUXPORT NISSAN FRONTIER INSTALLATION

Before installing your Truxport system, install cab seal on the front bulkhead of your pickup bed.

**STEP 1:** Install cab seal inside front bulkhead, covering full width of bulkhead. Align top edge of seal flush with top edge of bulkhead. Slowly peel backing and press seal against bulkhead to bond adhesive.

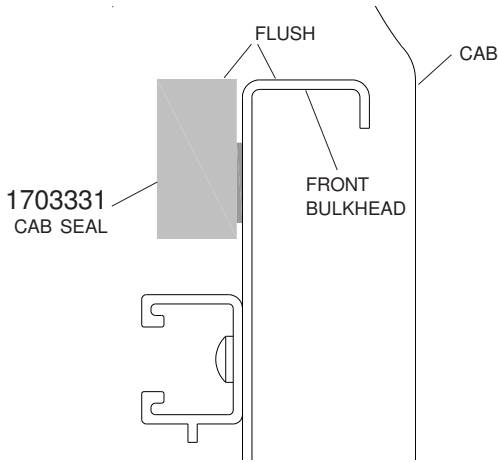

**STEP 2:** Position cab header over front bulkhead and cab seal as shown below. Install your Truxport cover as shown in owner's manual.

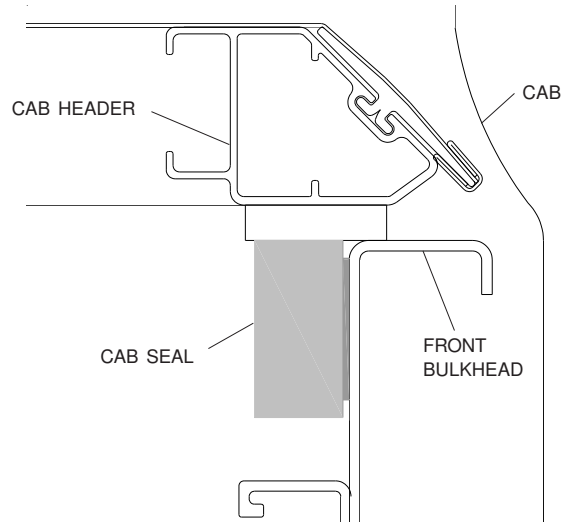

## TruXedo, Inc.

P.O. Box 1078, 2209 Kellen Gross Dr., Yankton, South Dakota 57078

Call Toll Free: 1-877-TRUXEDO (1-877-878-9336) Fax: (605) 664-9304 Visit Us Online: <http://www.truxedo.com>


P/N 1116774 Rev. B




# TRUXPORT NISSAN FRONTIER INSTALLATION

Before installing your Truxport system, install cab seal on the front bulkhead of your pickup bed.

**STEP 1:** Install cab seal inside front bulkhead, covering full width of bulkhead. Align top edge of seal flush with top edge of bulkhead. Slowly peel backing and press seal against bulkhead to bond adhesive.

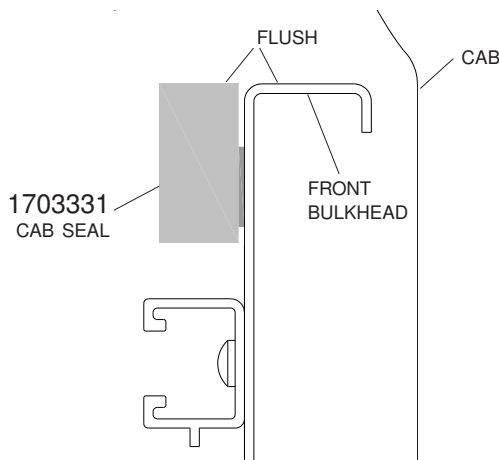

**STEP 2:** Position cab header over front bulkhead and cab seal as shown below. Install your Truxport cover as shown in owner's manual.

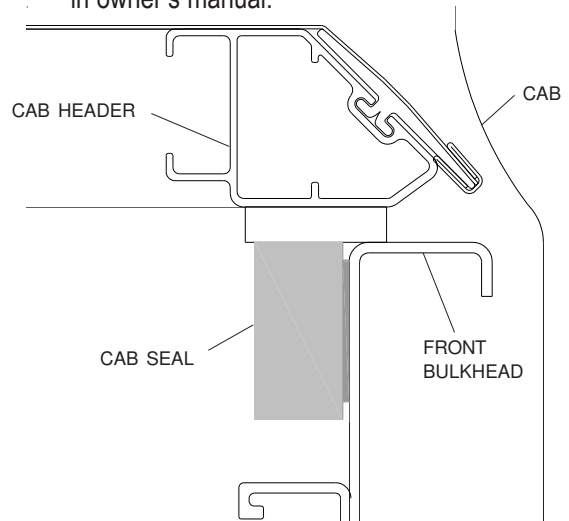

## TruXedo, Inc.

P.O. Box 1078, 2209 Kellen Gross Dr., Yankton, South Dakota 57078

Call Toll Free: 1-877-TRUXEDO (1-877-878-9336) Fax: (605) 664-9304 Visit Us Online: <http://www.truxedo.com>

P/N 1116774 Rev. B

