


# TRUXPORT® 2007 TOYOTA TUNDRA WITH TRAC SYSTEM INSTRUCTIONS

Item	Part #	Description
1.	1703530	Male Clamp
2.	1703904	Female Track
3.	1703925	5/16-18 Cap Screw
(1703926 Six Assembled Clamps)		


1. 1703530 Male Clamp
2. 1703904 Female Track
3. 1703925 5/16-18 Cap Screw

(1703926 Six Assembled Clamps)

Refer to Owner's Manual for complete instructions.

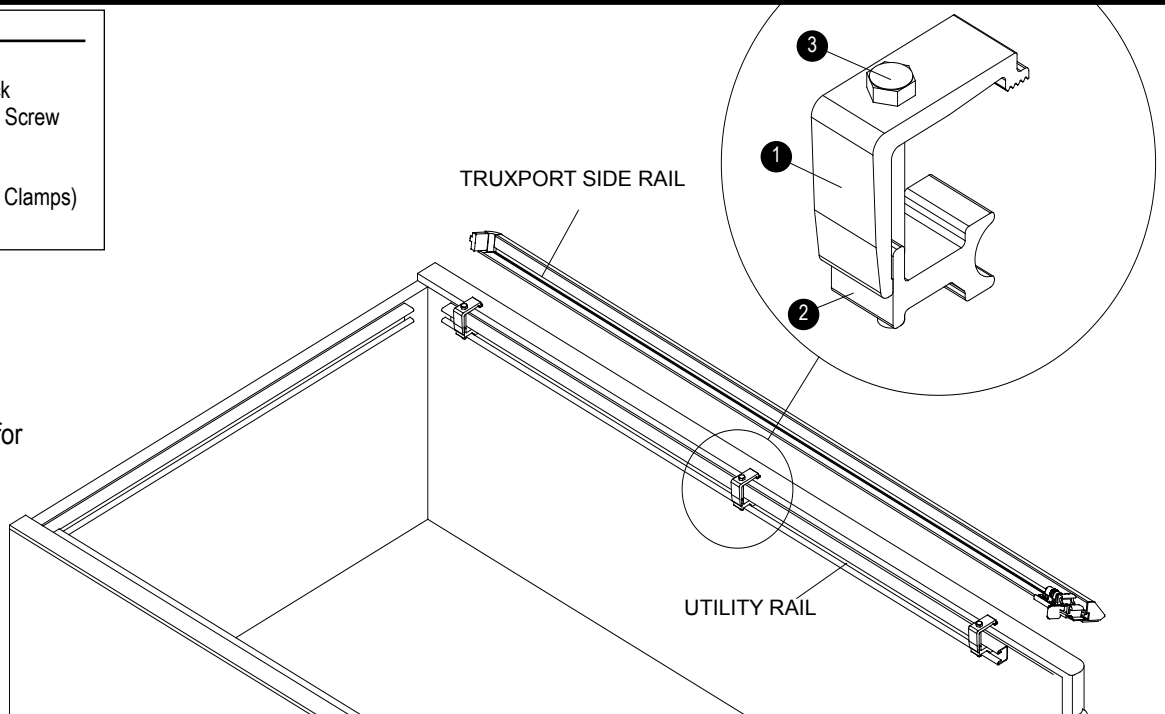


**STEP 1:** Insert clamp assemblies into utility rails, three on each side of pickup bed.

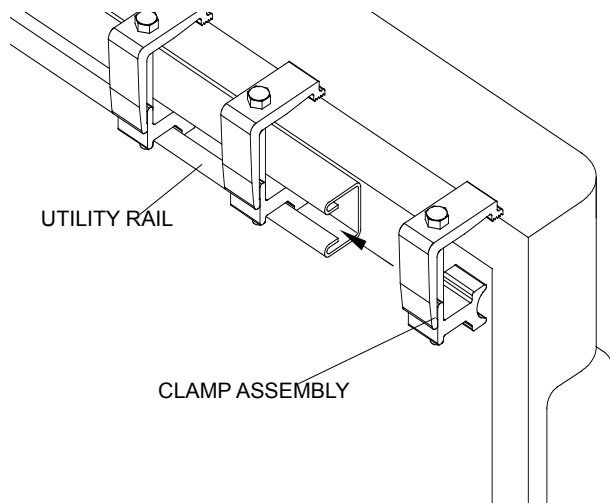

**STEP 2:** Evenly space 3 clamp assemblies along utility rail.

**STEP 3:** Refer to owner's manual for side rail placement.

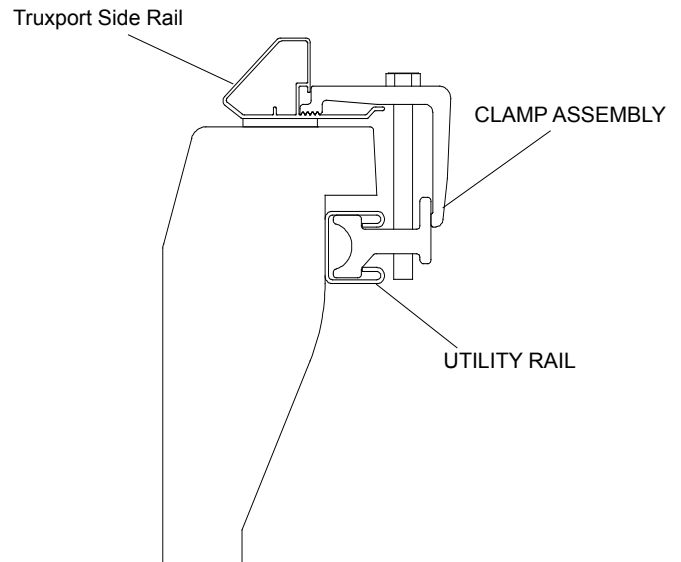

## ⚠ CAUTION

**Tighten clamp assemblies securely on side rails before driving vehicle.**

**NOTE:** See Owner's Manual for cover installation.

## TRUXEDO

P.O. Box 713, 2209 Kellen Gross Dr., Yankton, South Dakota 57078  
 Call Toll Free: 1-877-TRUXEDO (1-877-878-9336) Fax: (605) 664-9304 Visit Us Online: <http://www.truxedo.com>

# TRUXPORT

Another Fine Tonneau Cover by Truxedo

P/N 1117387 Rev. A