


TRUXEDO® BULKHEAD SEAL KIT

- 1) Clean surface with rubbing alcohol before applying seal to bulkhead. Apply the seal to front bulkhead of pickup box near the cab. Cut to fit. See detail-A.
- 2) If truck has a spray-in bed liner that was applied over the top of the bulkhead see detail-B.

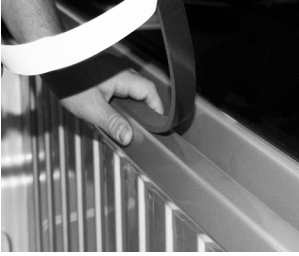

Detail-A: Apply the bulkhead seal by peeling off part of the seal's paper backing and sticking the peeled section to the bulkhead, slowly remove the paper backing as the seal is applied.

Detail-B: Apply the bulkhead seal to the existing seal on the underside of front header.

TRUXEDO
Patented

by TruXedo, Inc.

P.O. Box 1078, 2209 Kellen Gross Dr., Yankton, SD 57078

Phone: 877- 878-9336 • Fax: (605) 664-9304 www.truxedo.com

P/N 1117541 Rev. B

TRUXEDO® BULKHEAD SEAL KIT

- 1) Clean surface with rubbing alcohol before applying seal to bulkhead. Apply the seal to front bulkhead of pickup box near the cab. Cut to fit. See detail-A.
- 2) If truck has a spray-in bed liner that was applied over the top of the bulkhead see detail-B.



Detail-A: Apply the bulkhead seal by peeling off part of the seal's paper backing and sticking the peeled section to the bulkhead, slowly remove the paper backing as the seal is applied.

Detail-B: Apply the bulkhead seal to the existing seal on the underside of front header.

TRUXEDO
Patented

by TruXedo, Inc.

P.O. Box 1078, 2209 Kellen Gross Dr., Yankton, SD 57078

Phone: 877- 878-9336 • Fax: (605) 664-9304 www.truxedo.com

P/N 1117541 Rev. B

TRUXEDO® BULKHEAD SEAL KIT

- 1) Clean surface with rubbing alcohol before applying seal to bulkhead. Apply the seal to front bulkhead of pickup box near the cab. Cut to fit. See detail-A.
- 2) If truck has a spray-in bed liner that was applied over the top of the bulkhead see detail-B.



Detail-A: Apply the bulkhead seal by peeling off part of the seal's paper backing and sticking the peeled section to the bulkhead, slowly remove the paper backing as the seal is applied.

Detail-B: Apply the bulkhead seal to the existing seal on the underside of front header.

TRUXEDO
Patented

by TruXedo, Inc.

P.O. Box 1078, 2209 Kellen Gross Dr., Yankton, SD 57078

Phone: 877- 878-9336 • Fax: (605) 664-9304 www.truxedo.com

P/N 1117541 Rev. B

TRUXEDO® BULKHEAD SEAL KIT

- 1) Clean surface with rubbing alcohol before applying seal to bulkhead. Apply the seal to front bulkhead of pickup box near the cab. Cut to fit. See detail-A.
- 2) If truck has a spray-in bed liner that was applied over the top of the bulkhead see detail-B.



Detail-A: Apply the bulkhead seal by peeling off part of the seal's paper backing and sticking the peeled section to the bulkhead, slowly remove the paper backing as the seal is applied.

Detail-B: Apply the bulkhead seal to the existing seal on the underside of front header.

TRUXEDO
Patented

by TruXedo, Inc.

P.O. Box 1078, 2209 Kellen Gross Dr., Yankton, SD 57078

Phone: 877- 878-9336 • Fax: (605) 664-9304 www.truxedo.com

P/N 1117541 Rev. B