



## **RUNNING BOARD TRIM STRIP**

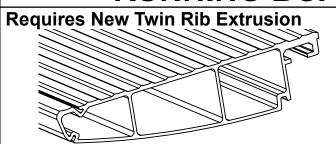

Trim Strip Part # 10-75149-90 10-75150-90

Board Length 79" 85"

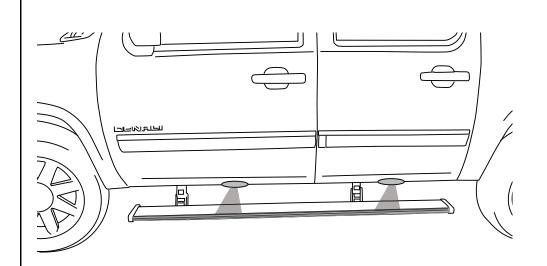

## INSTALLATION TIME






## 2= Moderate

## **TOOLS REQUIRED**


- Safey glasses
- □ 3/16 Allen
  - Saw (some Applications)

TECH SUPPORT 1-888-983-2204 (Press 2) Monday - Friday, 6:00 AM - 5:00 PM PST

Designed and manufactured by AMP Research. Patent 6,830,257 / 6,641,158 / 6,834,875 / 6,938,909 / 6,942,233 / 7,007,961 Other US and worldwide patents pending. 5-year limited warranty. Professional installation is recommended.

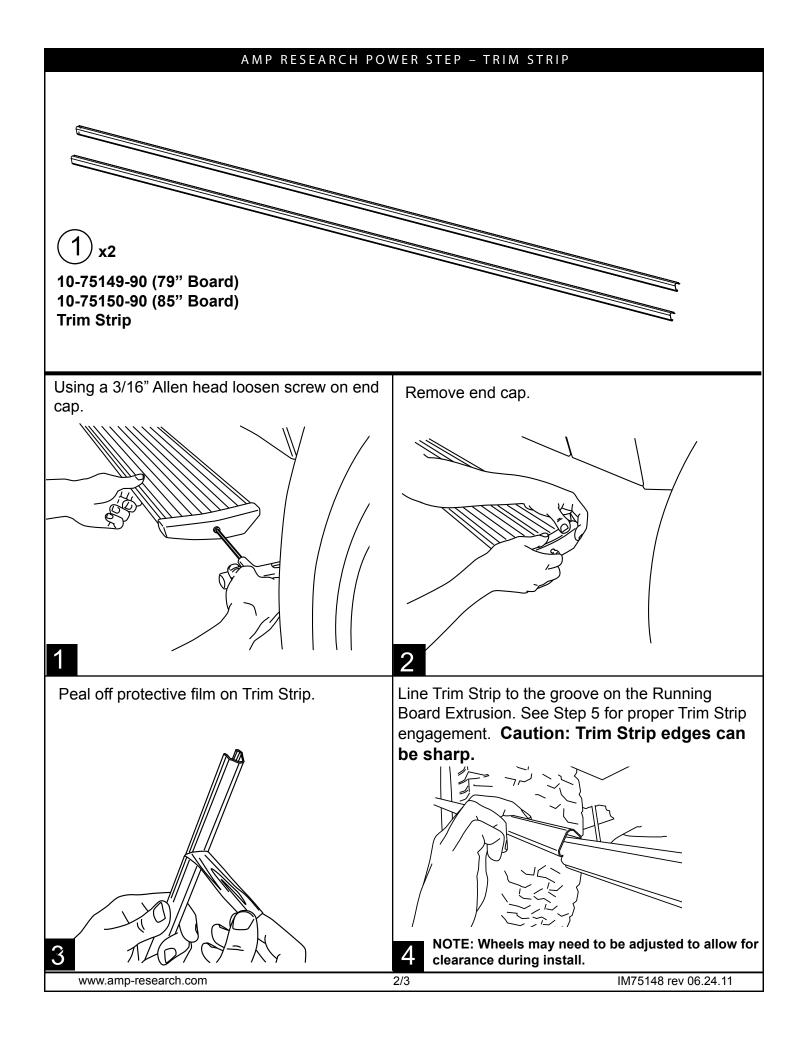


NOTE: Trim Strip should be lined up in both the upper and lower grooves.

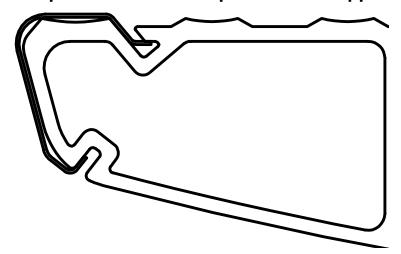

5


With Trim Strip lined up to the groove slide it onto Running Board and under the cap on the opposite end. Ensure that the Trim Strip does not buckle during install.

Caution: Trim Strip edges can be sharp.

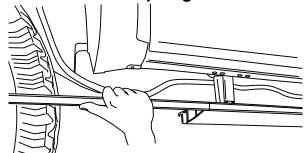


Once Trim Strip is installed verify that it is properly engaged along the Running Board.


If End Cap wedge was completely removed reinstall onto End Cap.

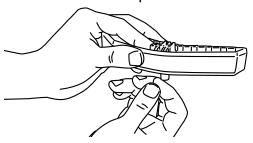


**Wedge Orientation** 



Note: Left and Right End Caps have matching Wedges. Cutting may be required if your Running Board is less than 79". Excess material can be trimmed with a Hacksaw.

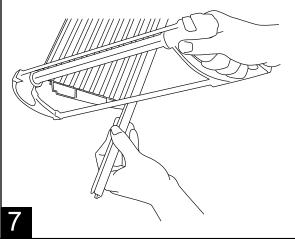

Slide End Cap onto board.

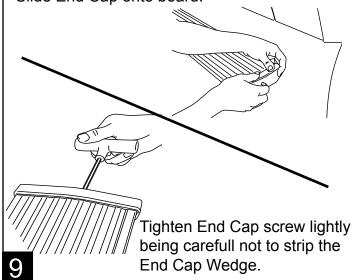

www.amp-research.com 3/3 IM75148 rev 06.24.11