


CHEVY COLORADO/GMC CANYON SIDE RAIL INSTALLATION

Follow the Owner's Manual instructions to install side rails on your Chevy Colorado or GMC Canyon pickup with this exception: Install the rear clamps 14" in front of the tailgate.

It is not possible to fasten the rear clamps 8" from the tailgate, as shown in the Owner's Manual, because of the contour of the pickup bed rails.

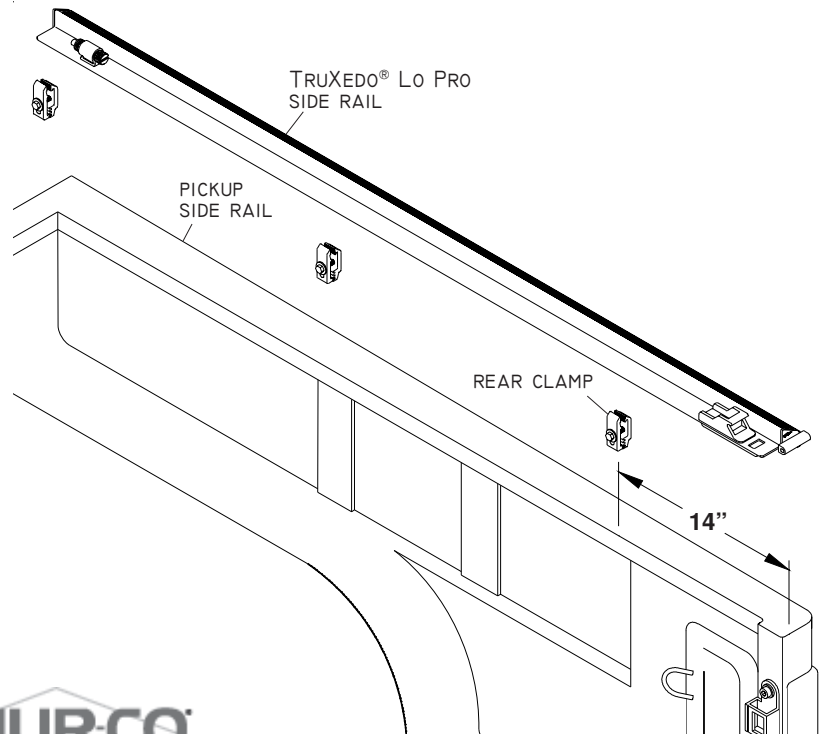

SHUR-CO.
AUTOMOTIVE

Shur-Co. Automotive

P.O. Box 713, 2209 Kellen Gross Dr., Yankton, South Dakota 57078


Call Toll Free: 1-877-TRUXEDO (1-877-878-9336) Fax: (605) 664-9304 Visit Us Online: <http://www.truxedo.com> P/N 1115963

TRUXEDO
1-877-TRUXEDO

CHEVY COLORADO/GMC CANYON SIDE RAIL INSTALLATION

Follow the Owner's Manual instructions to install side rails on your Chevy Colorado or GMC Canyon pickup with this exception: Install the rear clamps 14" in front of the tailgate.

It is not possible to fasten the rear clamps 8" from the tailgate, as shown in the Owner's Manual, because of the contour of the pickup bed rails.

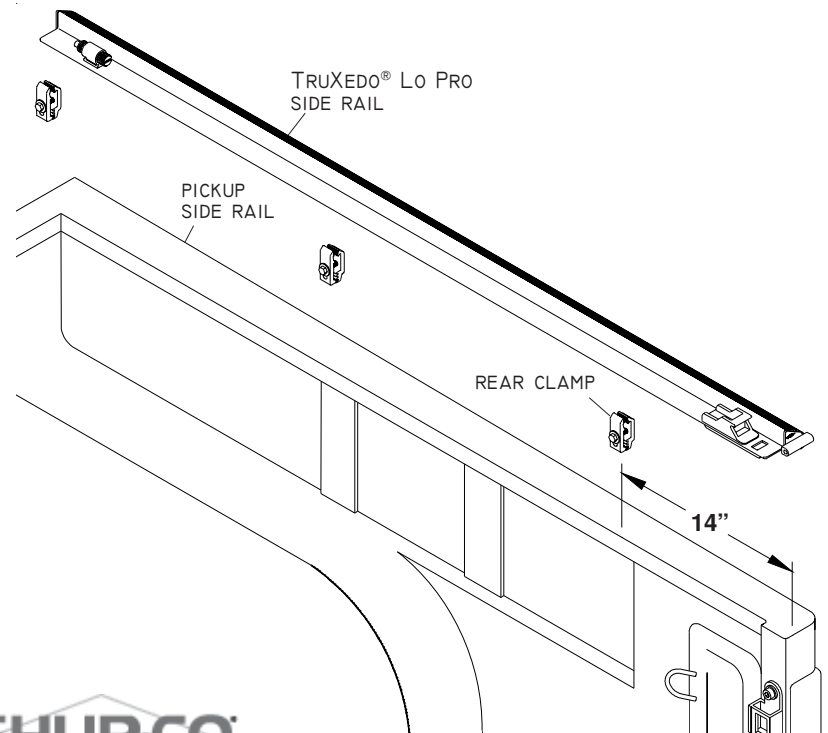

SHUR-CO.
AUTOMOTIVE

Shur-Co. Automotive

P.O. Box 713, 2209 Kellen Gross Dr., Yankton, South Dakota 57078

Call Toll Free: 1-877-TRUXEDO (1-877-878-9336) Fax: (605) 664-9304 Visit Us Online: <http://www.truxedo.com> P/N 1115963

TRUXEDO
1-877-TRUXEDO