

TYPHOON INTAKE SYSTEMS

BY 

INSTALLATION INSTRUCTIONS

69-4510

Chevrolet

2002-05 Cavalier


L4-2.2L Ecotec

Pontiac

2002-04 Sunfire

L4-2.2L Ecotec

**NOTE: C.A.R.B. E.O.#D-269-32
APPLIES TO CAVALIER
MODEL ONLY**

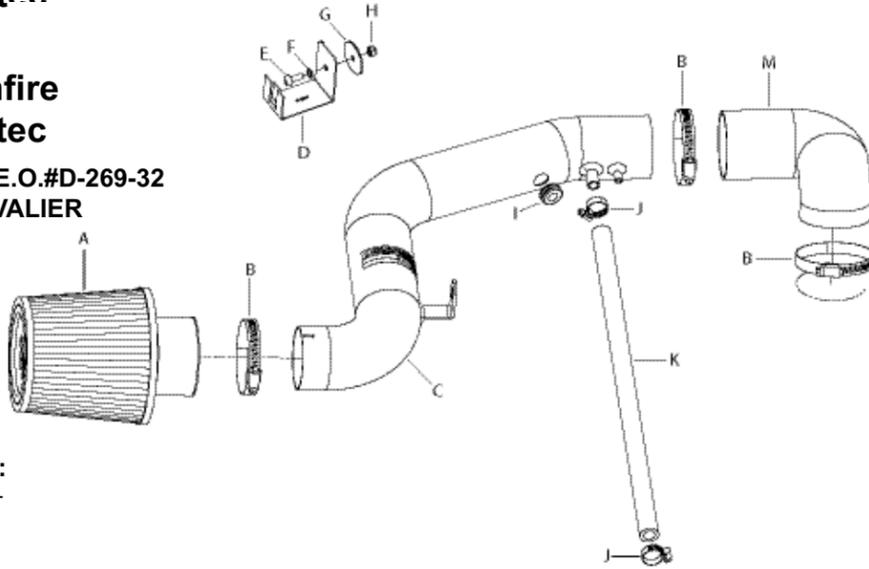

TOOLS NEEDED:

Flat Blade Screwdriver
Phillips Screwdriver
Pliers
Ratchet
5/16" Socket
10mm Socket
13mm Socket


Parts List

Description	Qty.	P/N
A FILTERCHARGER	1	KRU4960E
B HOSE CLAMP #44	3	08560
C TYPHOON INTAKE TUBE	1	27165
D BRACKET, "C"	1	010046
E BOLT; M6-1.00 X 16MM, BUTTONHEAD	1	07730
F WASHER; 6MM WAVE, SS	1	08277
G WASHER; FENDER, SS	1	21711
H NUT; 6MM NYLOCK, SS	1	07512
I GROMMET; 7/16"ID	1	08092
J HOSE CLAMP; #006 MINI	2	08407
K HOSE; 1/2"ID X 19"L, BLACK SILICONE	1	084075
M HOSE; 2-3/4"ID TRANSITION, BLACK	1	084082


NOTE: FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS AND NOT USING THE PROVIDED HARDWARE MAY DAMAGE THE INTAKE TUBE, THROTTLE BODY AND ENGINE.

TO START:


1. Turn the ignition OFF and disconnect the vehicle's negative battery cable.

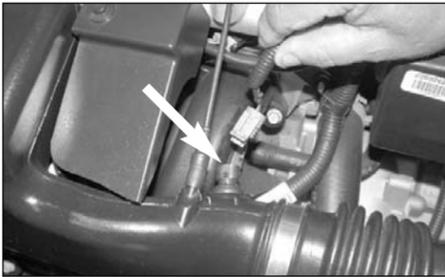


2. Disconnect the air temperature sensor electrical connection as shown.

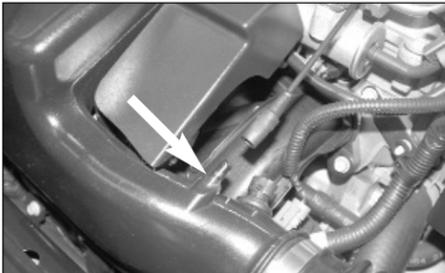

3. Disconnect the vent hose from the stock intake tube as shown.

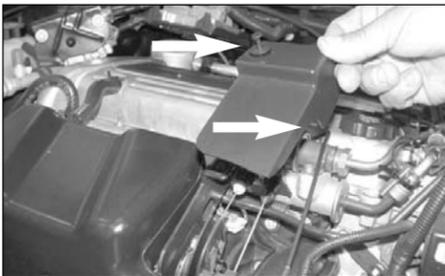


4. Disengage the plastic rivet and remove the throttle cable cover as shown.

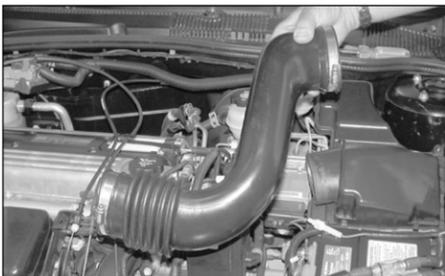

5. Loosen hose clamps and remove the stock intake tube as shown.



6. Loosen the hose clamp on the intake plenum at the throttle body as shown.

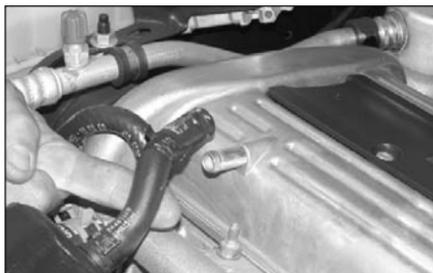

7. Remove the crankcase vent hose from the intake plenum as shown.



8. Pull upwards to remove the intake plenum as shown.



9. Remove the air temperature sensor from the intake tube as shown.



10. Unclip the wire harness from the air cleaner cover as shown.



11. Loosen and remove the four air cleaner bolts to remove the air cleaner cover as shown.



12. On manual transmission vehicles remove the fluid reservoir from the side of the lower air cleaner assembly as shown.



13. Loosen and remove the battery hold down block from the battery tray as shown, and slide the battery forward to create clearance for removal of the lower air cleaner assembly.



14. Disengage the plastic rivet and pull the fuse box upwards as shown.



15. Rotate and pull the lower air cleaner assembly upwards to remove the assembly as shown.



16. Secure the fuse box using the stock plastic rivet as shown.




17. Reinstall the battery hold down block as shown.



18. On manual transmission vehicles install the provided reservoir bracket onto the air cleaner locator bracket using the provided hardware as shown.



19. On manual transmission vehicles slide the fluid reservoir onto the bracket from step 18 as shown.

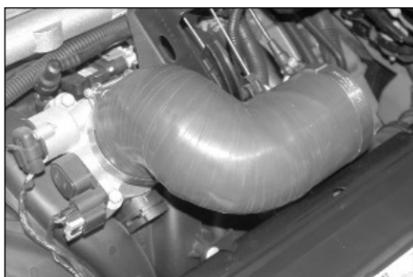

20. Install the silicone hose and hose clamps onto the throttle body as shown.



21. Remove the hex nut from the EVAP canister purge solenoid as shown.



22. Install the provided rubber grommet into the hole on the K&N intake tube as shown.




23. Install the air temperature sensor into the grommet on the intake tube as shown.




24. Slide the K&N intake tube into the silicone hose as shown.




25. Line up the K&N tube bracket with the stud from step 21, double check clearances and fit, then, secure it using the hex nut from the same step.

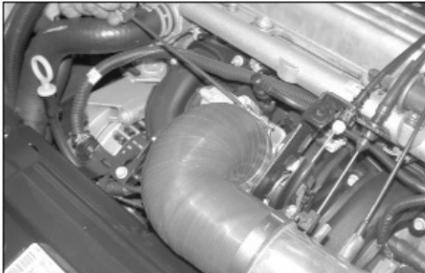


26. Adjust for best fit then tighten the hose clamps on the throttle body/intake tube as shown.

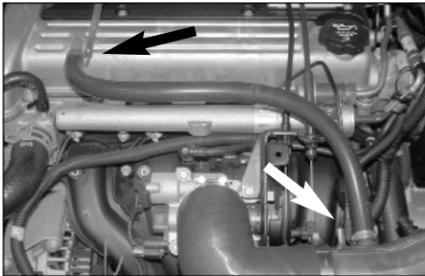

27. Connect the one end of the provided silicone hose to the vent on the cam cover, then, connect the other end to the vent on the K&N intake tube and secure with the provided hose clamps as shown.

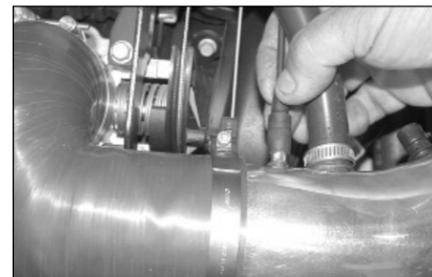

28. Reconnect the vent hose as shown.

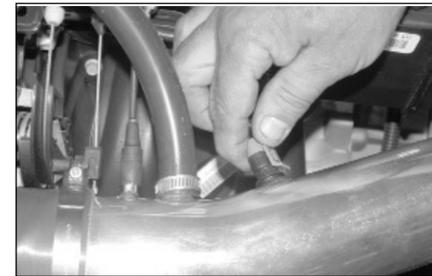

29. Reconnect the air temperature sensor electrical connection as shown.



30. Install the K&N Filtercharger onto the K&N intake tube and secure with the provided hose clamp as shown.



31. Re-connect the negative battery cable and double check that everything is tight and properly positioned before starting vehicle.

32. The C.A.R.B. exemption sticker, (attached), must be visible under the hood, so that an emissions inspector can see it when the vehicle is required to be tested for emissions. California requires testing every two years, other states may vary.

33. It will be necessary for all Typhoons to be checked periodically for realignment, clearance and tightening of all connections. Failure to follow the above instructions or proper maintenance may void warranty.

ROAD TESTING:

1. Start the engine with the transmission in neutral or park, and the parking brake engaged. Listen for air leaks or odd noises. For air leaks secure hoses and connections. For odd noises, find cause and repair before proceeding. This kit will function identically to the factory system except for being louder and much more responsive.
2. Test drive the vehicle. Listen for odd noises or rattles and fix as necessary.
3. If road test is fine, you can now enjoy the added power and performance from your kit.
4. K&N suggests checking the Filtercharger element periodically for excessive dirt build-up. When the element becomes covered in dirt (or once a year), service it according to the instructions on the Recharger service kit, part number 99-5000 or 99-5050.

FREE K&N DECAL To register your warranty, please see us online at knfilters.com/register. FREE K&N DECAL