


### 2012 Hyundai Veloster 1.6L

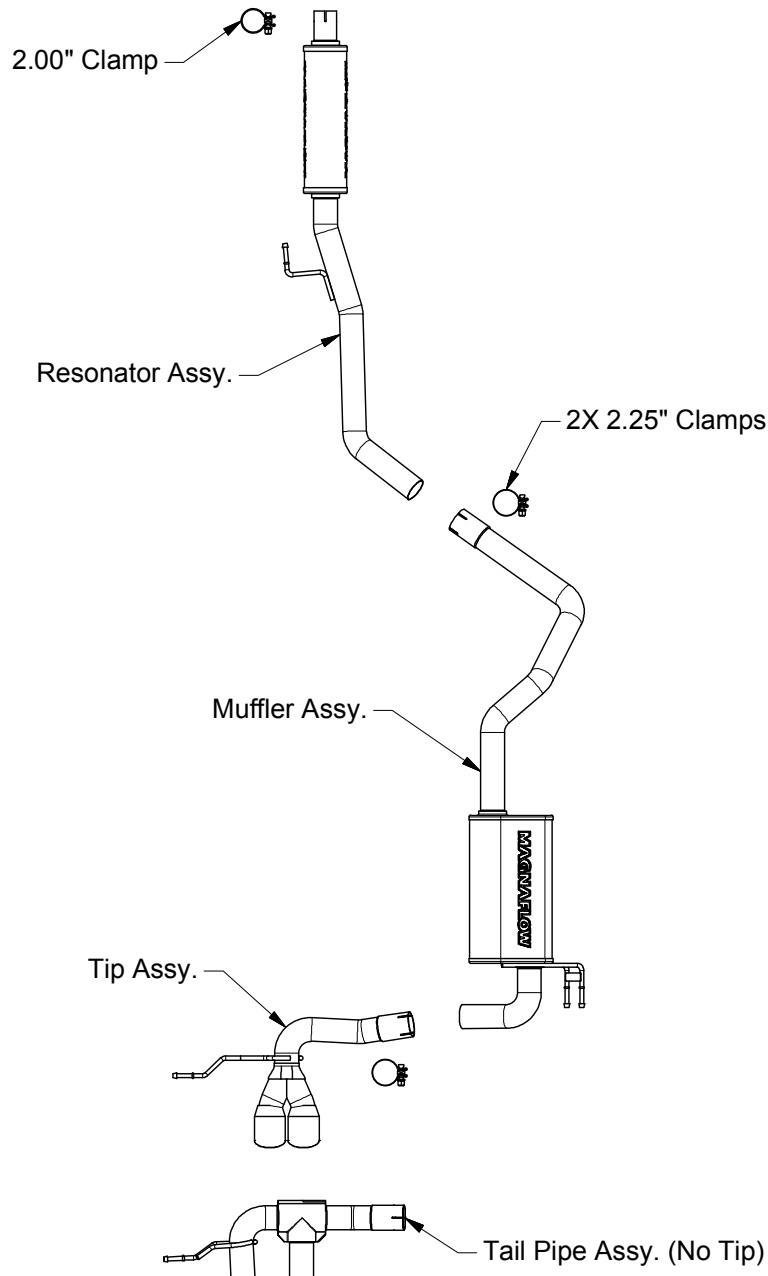

**Warning:** When working on, under, or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust system temperatures may cause severe burns. If working without a lift, always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure a safe work area. Serious injury or death could occur if safety measures are not followed.

**Step 1:** (Carefully read all instructions before installation) To begin removal of the OEM exhaust system you must first cut the stock pipe 3" forward of the OEM resonator. Working front to rear disengage all welded hangers from the rubber isolators. The OEM system can now be removed. Retain all mounting hardware as it will be needed to mount your new system.

**Step 2:** Begin installation of your new MAGNAFLOW performance exhaust system by first slipping the resonator assembly inlet pipe over the OEM pipe you have just cut. Loosely secure using the supplied clamp. Locate the welded hanger to the rubber isolator. Install the muffler assembly in a similar fashion. There are two tip options included. One will allow the new system to use the OEM tip configuration, the other does not. Select your desired option and loosely install using the supplied clamp.

**Step 3:** With all components mounted loosely, adjust the system for overall aesthetics and clearance of frame & bodywork. (MAGNAFLOW recommends at least 1/2" of clearance between the exhaust system and any body panels to prevent heat-related body damage or fire.)

**Step 4:** Once a final position has been chosen for the new system, evenly tighten all fasteners from front to rear. The supplied band clamps must be VERY tight to properly align the pipes and prevent leaks (Approximately 40ft-lbs). Inspect all fasteners after 25-50 miles of operation and retighten if necessary.

**\*\* Magnaflow Performance Exhaust recommends professional installation on all their products**