


2012 Hyundai Veloster 1.6L Axle Back

Warning: When working on, under, or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust system temperatures may cause severe burns. If working without a lift, always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure a safe work area. Serious injury or death could occur if safety measures are not followed.

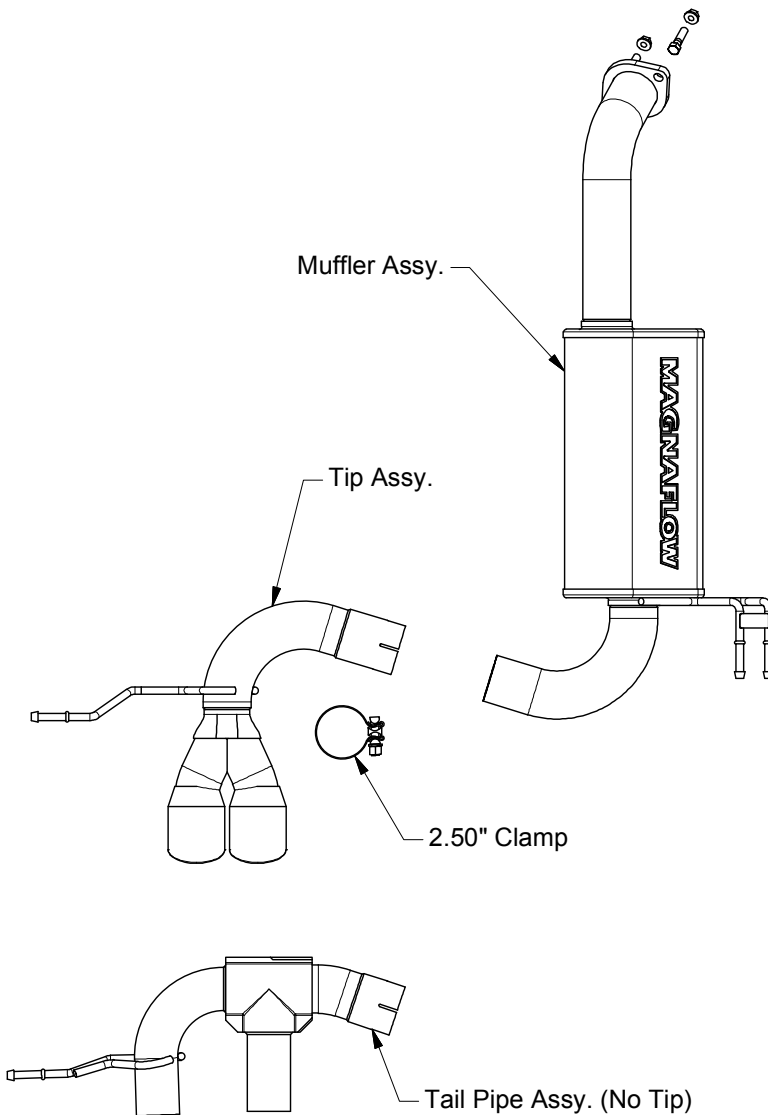

Step 1: (Carefully read all instructions before installation) Unbolt the OEM exhaust system just forward of the rear axle. Disengage the welded hangers from the rubber isolators. The rear portion of the OEM system can now be removed. Retain all houting hardware as it will be needed to mount your new system.

Step 2: Begin installation of your new MAGNAFLOW performance exhaust system by first bolting the inlet flange of the muffler assembly to the outlet flange of the OEM system using the supplied hardware. There are two tip options included. One will allow the new system to use the OEM tip configuration, the other does not. Select your desired option and slip over the outlet of the muffler assembly. Locate the welded hangers to the rubber isolators and loosely secure using the supplied clamp

Step 3: With all components mounted loosely, adjust the system for overall aesthetics and clearance of frame & bodywork. (MAGNAFLOW recommends at least 1/2" of clearance between the exhaust system and any body panels to prevent heat-related body damage or fire.)

Step 4: Once a final position has been chosen for the new system, evenly tighten all fasteners from front to rear. The supplied band clamps must be VERY tight to properly align the pipes and prevent leaks (Approximately 40ft-lbs). Inspect all fasteners after 25-50 miles of operation and retighten if necessary.

**** Magnaflow Performance Exhaust recommends professional installation on all their products**