



**INSTALLATION INSTRUCTIONS FOR 2005-2013 TOYOTA TACOMA
4 X 4 AND PRERUNNER.
DIFFERENTIAL DROP KIT
PART NUMBER RTDD2-KB**

(MANDATORY TO MINIMIZE OR AVOID CV BOOT WEAR)

1. Remove skid plate under the front of the vehicle. Save the OEM bolts.
2. Remove factory 19mm x 5" long bolts and nuts, supporting the front differential. (See Figure 1). Save the OEM washers for step 3.
3. Install Revtek spacers RTDDS-1 between the two front differential supports and front cross-member. Fasten to cross-member using new ½ x 6" long bolts and nuts (making sure to reuse the factory washers). (See Figure 2.)
4. Torque all skid plate bolts to specs (you may need to adjust the skid plate holes).

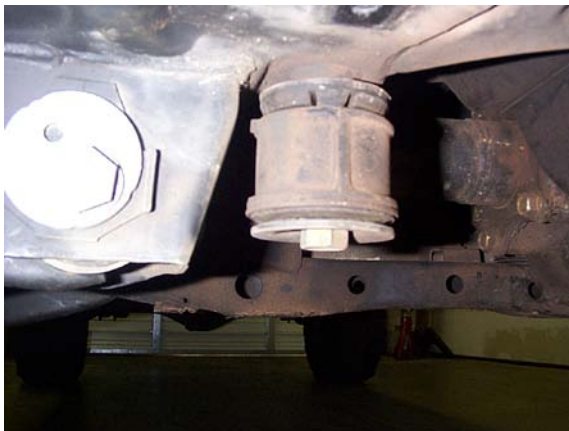


Figure 1



Figure 2