



**INSTALLATION INSTRUCTIONS FOR 2007- 14
TOYOTA TUNDRA 4WD, 2009-2014 SEQUOIA 4WD
DIFFERENTIAL DROP KIT**

DIFFERENTIAL DROP SPACER KIT

1. Remove skid plate under the front of the vehicle (12mm socket); save the OEM bolts.
2. Remove the factory bolts holding the front of the differential to the cross member (19mm socket); save the OEM cup washers on the bolt for step 3.
3. Install Revtek spacers RTDDS-1 between the two front differential supports and front cross-member. Fasten to cross-member using new ½" x 6" long bolts, nuts, and washers. Be sure you use the provided flat washers and the OEM cup washers on the bolt side. You will use the provided flange nuts on the top with no washers. This will allow you to tighten the assembly without the need for a wrench in the confined space on the cross member (19mm socket.) See (Fig J.)

SKID PLATE

4. Install the skid plate in the reverse operation of removal with the exception of installing the (3) spacers on the rear of the skid plate between the frame and the skid plate. See (Fig. K.)
5. Torque skid plate bolts to specs.

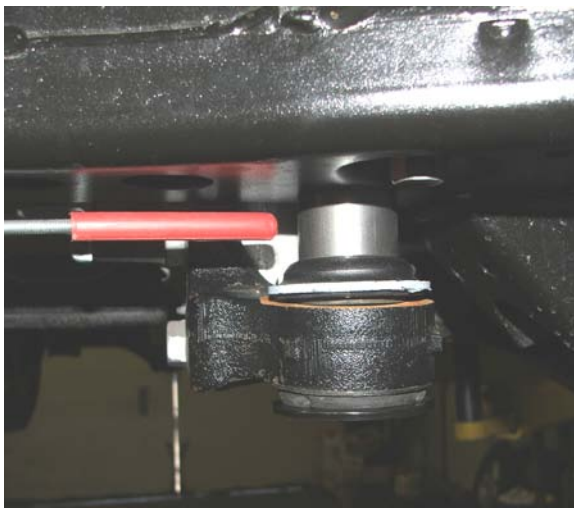


FIG J



FIG K