



Installation Instructions
Security Floor Console (Part #317xx)
1976-1995 Jeep CJ & Wranglers

- 4) Re-position the Security Floor Console between the seats and fasten down the rear and front of the console by using 3-Long Bolts, 3-Lock Washers and 3-Nuts included (Figure 5). **NOTE:** Do not over tighten bolts, may damage the floor of the vehicle.

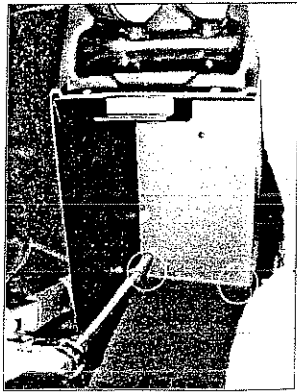


Figure 5

To lock and unlock Security Floor Console, insert key, push down and turn.

LIMITED 90 DAY WARRANTY

Smittybilt (the Company) warrants to the original purchaser of this product that, should the product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 90 DAYS from the date of original purchase, such defect(s) will be repaired or replaced (at the Company's option) without charge for parts or labor.

To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. Dated bill of sale), specification of defect(s) to the place of purchase or, with prior approval from the Company, freight pre-paid to the Company address listed below.

This warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident or by acts of nature. THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.


This Warranty is in lieu of all express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN THE PERIOD OF 90 DAYS FROM DATE OF ORIGINAL PURCHASE.

IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some States do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage, so the above limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

For Technical Support/Warranty Information please call 310-762-9944

Smittybilt, 1600 Walnut Parkway, Rauncho Dominguez, CA 90220

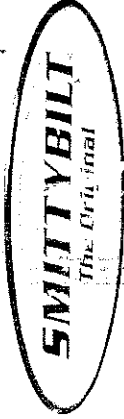

Installation Instructions

Security Floor Console (Part #317xx)
1976-1995 Jeep CJ & Wranglers



Installation Instructions

Security Floor Console (Part #317xx)
1976-1995 Jeep CJ & Wranglers

IMPORTANT NOTICE:

This Security Floor Console installation requires drilling. Carefully read the instructions before attempting to install this product. Smittybilt is in no way responsible for any damage to the vehicle or personal injury that may occur during the installation or use of this product.

INCLUDED COMPONENTS

- 1 - Security Floor Console
- 3 - Large Bolts (3/8" x 16 X 7")
- 2 - Small Bolts (3/8-16 X 3/4")
- 5 - Nuts
- 5 - Lock Washers
- 1 - Mounting Bracket
- 2 - Keys

TOOLS NEEDED

- Electric Drill
- 2 - Crescent Wrenches
- Utility Knife
- Marker

INSTALLATION INSTRUCTIONS

- 1) Attach the Mounting Bracket to the two center holes on the bottom of the console by using the 2-Small Bolts, 2- Lock Washers and 2-Nuts included (Figure 1 & 2).



Figure 1



Figure 2

- 2) Position the Security Floor Console between the seats and mark the floor directly under the mounting holes in the bottom of the console (Figure 3). **NOTE:** Position the Security Floor Console directly behind the shift boot, check to make sure that the shift lever will not interfere with the cup holder.

- 3) Remove the Security Floor Console, cut holes in the carpet where the marks are and drill a 3/8" hole in each marked spot (Figure 4). **WARNING! Make sure that there is nothing under the vehicle that will be damaged by the drill bit when drilling.**

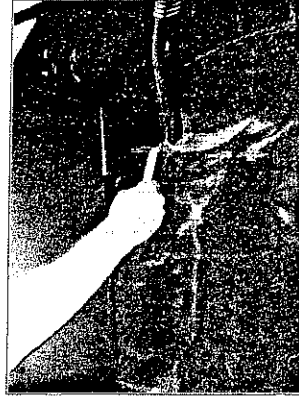


Figure 3



Figure 4

For Technical Support/Warranty Information please call 310-762-9944

Smittybilt, 1600 Walnut Parkway, Rancho Dominguez, CA 90220

For Technical Support/Warranty Information please call 310-762-9944

Smittybilt, 1600 Walnut Parkway, Rancho Dominguez, CA 90220