

# M95 PERFORMANCE MONOTUBE SHOCKS

Skyjacker's new M95 Monotube Shock is the ultimate shock absorber for light trucks, Jeeps and SUVs. This single tube design helps operating temperatures stay cooler under extreme conditions. The high pressure nitrogen gas and floating piston technology combine to create the fastest responding shock ever.

## BENEFITS

- High Pressure Nitrogen Gas Charged
- Custom Tuned for Each Vehicle
- Monotube Design
- 180° Directional Mounting
- Large 46mm Bore
- No Fade or Lag for Consistent Performance



**180°**  
DIRECTIONAL MOUNTING



# SKYJACKER® HYDRO/NITRO SHOCKS

**Skyjacker® Hydro and Nitro Shocks** Skyjacker® Suspensions offers you a high quality shock absorber with true velocity sensitive valving. Shock absorbers, or spring dampers as it is called everywhere else except in the U.S., control the rate at which suspension springs compress and rebound. As the shock is pushed together, this is called bump or compression. As the shock expands, this is called rebound or extension. Absorbing the 'shock' of bumps and suspension loading is actually performed by the springs in the suspension. The shock's real job is controlling the energy stored in the springs.

## SKYJACKER® HYDRO 7000

**HYDRO H7000 Series Shocks** are recommended for multiple shock applications and mild to moderate off-road use.

### HYDRO 7000 FEATURES

- Hydraulic Action
- Multi-Stage Velocity Sensitive Valving
- Twin Tube Construction
- Bonded Iron Piston
- Chromed Piston Rod with Micro Pores
- Red Polyurethane Bushings
- Includes Red Boot
- Limited Lifetime Warranty

### D.O.M. Tubing

Reduces Internal Wear for Longer Product Life

### Bonded Iron Piston

For Durability and Longer Shock Life

### Chromed Piston Rod

Features Micro Polished Shaft for Improved Product Life and Performance

### Orifice Disk

For Axle Control in any Condition.

### Leak Proof Seal

Prevents Hydraulic Fluid from passing around Piston Head for a Consistent and Reliable Ride



## SKYJACKER® NITRO 8000

**NITRO N8000 Series Shocks** are recommended for full-size vehicles and moderate to extreme off-road applications.

### NITRO 8000 FEATURES

- 150 PSI Pressurized Nitrogen Gas
- Multi-Stage Velocity Sensitive Valving
- Twin Tube Construction
- Bonded Iron Piston
- Chromed Piston Rod with Micro Pores
- Red Polyurethane Bushings
- Includes Red Boot
- Limited Lifetime Warranty

**Performance** The performance specific internal components of Skyjacker's shocks respond to the on- and off-road conditions instantly. Whether you are going over rough or smooth terrain at slow or fast speeds, the true velocity sensitive valving produces a stable, controlled level of resistance for better handling, improved stability, and maximum comfort. The technological innovations of these durable, long lasting shocks from Skyjacker® deliver a noticeable advantage over the original equipment and other shock dampeners. Skyjacker's shock absorbers deliver a safe, comfortable ride with improved handling and stability. They keep the tires in contact with the terrain and put you in control of the road ahead.









# SHOCK APPLICATION GUIDE

Lift Height		HYDRO		Front	NITRO		Front	MONOTUBE	
Front	Rear	Front	Rear	Dual	Front	Rear	Dual	Front	Rear
<b>67-77 Bronco 4WD</b>									
0-1"	0"	H7054	H7012	-----	N8054	N8012	-----	M9554	M9512
2-3"	1-2.5"	H7055	H7023	-----	N8055	N8023	-----	M9555	M9523
4-6"	3.5-5"	H7055	H7058	-----	N8055	N8058	-----	M9555	M9558
6.5-8"	5.5-10"	H7056	H7060	-----	N8056	N8060	-----	M9556	M9560
<b>00-04 Excursion 4WD (Leaf Spring Front End)</b>									
0-3"	0"	H7023	H7034	-----	N8023	N8034	-----	M9523	M9534
4-6"	1-4.5"	H7041	H7034	-----	N8041	N8034	-----	M9541	M9534
7-8"	5.5-8"	H7060	H7077	-----	N8060	N8077	-----	M9560	M9577
<b>05-15 F-250, F-350 Super Duty 2WD</b>									
0-1"	0"	H7052	H7041	-----	N8052	N8041	-----	M9552	M9541
2-4"	1-4"	H7054	H7060	-----	N8054	N8060	-----	M9554	M9560
6-8"	6-8"	H7055	H7079	-----	N8055	N8079	-----	M9555	M9579
<b>05-15 F-250, F-350 Super Duty 4WD</b>									
0-3"	0-3"	H7091	H7060	-----	N8091	N8060	-----	M9591	M9560
3.5-5"	3.5-5"	H7092	H7060	-----	N8092	N8060	-----	M9592	M9560
6-7"	6-7"	H7093	H7079	-----	N8093	N8079	-----	M9593	M9579
8.5"	8.5"	H7094	H7099	-----	N8094	N8099	-----	M9594	M9599
<b>99-04 F-250, F-350 Super Duty 2WD</b>									
0-1"	0-3"	H7052	H7060	-----	N8052	N8060	-----	M9552	M9560
2-4"	4-6"	H7054	H7079	-----	N8054	N8079	-----	M9554	M9579
6-8"	7-8"	H7055	H7099	-----	N8055	N8099	-----	M9555	M9599
<b>99-04 F-250, F-350 Super Duty 4WD</b>									
0-3"	0-1"	H7023	H7060	-----	N8023	N8060	-----	M9523	M9560
4-5"	2-7"	H7041	H7079	-----	N8041	N8079	-----	M9541	M9579
6-8"	2-7"	H7060	H7079	-----	N8060	N8079	-----	M9560	M9579
(A) Ahead of Axle. (B) Behind Axle.									
<b>97-98 F-250 HD 4WD with IFS Leaf Spring Front</b>									
0-2"	0-1"	H7023	H7058	-----	N8023	N8058	-----	M9523	M9558
<b>87-97 F-250 4WD with IFS</b>									
0-2"	0-1"	H7023	H7058	-----	N8023	N8058	-----	M9523	M9558
3-6"	1.5-5"	H7041	H7060	-----	N8041	N8060	-----	M9541	M9560
<b>80-86 F-250 4WD with IFS</b>									
0-2"	0-1"	H7054	H7058	-----	N8054	N8058	-----	M9554	M9558
3-4"	1.5-5"	H7055	H7060	-----	N8055	N8060	-----	M9555	M9560
5-6"	1.5-5"	H7056	H7060	-----	N8056	N8060	-----	M9556	M9560
5-8"	6-8"	H7056	H7079	-----	N8056	N8079	-----	M9556	M9579
<b>77.5-79 F-250 4WD Low Boy</b>									
0"	0"	-----	H7055	-----	N8055	-----	-----	M9555	-----
1-3"	1-3"	-----	H7056	-----	N8056	-----	-----	M9556	-----
3.5-4"	1-3"	-----	H7056	-----	N8014	N8056	-----	M9514	M9556
5-7"	3.5-6"	-----	H7059	-----	N8014	N8059	-----	M9514	M9559
<b>66-77 F-250 4WD High Boy</b>									
-----	0-4"	-----	H7058	-----	N8058	-----	-----	M9558	-----
2-4"	0-4"	-----	H7058	-----	N8014	N8058	-----	M9514	M9558
<b>97-98 F-250 Light Duty 2WD</b>									
3-6"	1.5-5"	H7041	H7060	-----	N8041	N8060	-----	M9541	M9560
<b>80-96 F-250 2WD</b>									
0-2"	0-3"	H7052	H7058	-----	N8052	N8058	-----	M9552	M9558
3-4"	0-3"	H7054	H7058	-----	N8054	N8058	-----	M9554	M9558
5-8"	3.5-6"	H7055	H7060	-----	N8055	N8060	-----	M9555	M9560
<b>86-98 F-350 4WD with Straight Axle</b>									
0-2"	0-4"	H7023	H7060	-----	N8023	N8060	-----	M9523	M9560
3-4"	0-4"	H7041	H7060	-----	N8041	N8060	-----	M9541	M9560
5-6"	0-4"	H7060	H7060	-----	N8060	N8060	-----	M9560	M9560
<b>80-85 F-350 4WD with IFS</b>									
0-2"	0-1"	H7054	H7058	-----	N8054	N8058	-----	M9554	M9558
3-6"	1.5-5"	H7055	H7060	-----	N8055	N8060	-----	M9555	M9560
<b>79 F-350 4WD</b>									
1-2"	1-3"	-----	H7056	-----	N8056	-----	-----	M9556	-----
3-4"	1-3"	-----	H7056	-----	N8014	N8056	-----	M9514	M9556
5-7"	3.5-6"	-----	H7059	-----	N8014	N8059	-----	M9514	M9559
<b>80-96 F-350 2WD</b>									
0-2"	0-3"	H7052	H7058	-----	N8052	N8058	-----	M9552	M9558
3-4"	0-3"	H7054	H7058	-----	N8054	N8058	-----	M9554	M9558
5-8"	3.5-6"	H7055	H7060	-----	N8055	N8060	-----	M9555	M9560

# SHOCK APPLICATION GUIDE

Lift Height		HYDRO		Front	NITRO		Front	MONOTUBE	
Front	Rear	Front	Rear	Dual	Front	Rear	Dual	Front	Rear
<b>83-97 Ranger &amp; Splash 4WD</b>									
0-2"	0-1"	H7052	H7058	-----	N8052	N8058	-----	M9552	M9558
3"	0-1"	H7054	H7058	-----	N8054	N8058	-----	M9554	M9558
4"	1.5-4.5"	H7054	H7060	-----	N8054	N8060	-----	M9554	M9560
5-6"	1.5-4.5"	H7055	H7060	-----	N8055	N8060	-----	M9555	M9560
7-8"	5-6"	H7055	H7079	-----	N8055	N8079	-----	M9555	M9579
<b>83-97 Ranger 2WD &amp; Bronco II 4WD, 2WD</b>									
0-2"	0-3.5"	H7052	H7058	-----	N8052	N8058	-----	M9552	M9558
3-4"	0-3.5"	H7054	H7058	-----	N8054	N8058	-----	M9554	M9558
5-8"	4-8"	H7055	H7060	-----	N8055	N8060	-----	M9555	M9560
<b>90-94 Explorer 4WD, 2WD</b>									
0-2"	0-2"	H7052	H7029	-----	N8052	N8029	-----	M9552	M9529
3-4"	3-6"	H7054	H7039	-----	N8054	N8039	-----	M9554	M9539
5-6"	3-6"	H7055	H7039	-----	N8055	N8039	-----	M9555	M9539
<b>HONDA</b>									
<b>94-95 Passport 4WD</b>									
0"	0"	H7052	H7055	-----	N8052	N8055	-----	M9552	M9555
<b>ISUZU</b>									
<b>05-08 Isuzu I-Serie 4WD</b>									
3-5"	3-4"	H7040	H7084	-----	N8040	N8074	-----	M9540	M9574
<b>89-95 Amigo 4WD, 2WD</b>									
0-1"	0"	H7052	H7023	-----	N8052	N8023	-----	M9552	M9523
<b>87-91 Trooper II 4WD</b>									
0-1"	0"	H7052	H7055	-----	N8052	N8055	-----	M9552	M9555
<b>84-86 Trooper II 4WD</b>									
0-1"	0"	H7052	H7023	-----	N8052	N8023	-----	M9552	M9523
<b>81-92 Pickup 4WD</b>									
1-2"	0-1"	H7052	H7012	-----	N8052	N8012	-----	M9552	M9512
<b>91-95 Pickup 2WD</b>									
0"	0"	H7052	H7023	-----	N8052	N8023	-----	M9552	M9523
<b>JEEP</b>									
<b>07-15 Wrangler JK 2-Door &amp; 4-Door 4WD</b>									
(-2)-(-2.5)"	(-2)-(-2.5)"	-----	-----	-----	N8005	N8007	-----	-----	-----
1-3.5"	2-3.5"	H7035	H7037	-----	N8035	N8037	-----	M9535	M9537
4-5"	4-5"	H7065	H7067	-----	N8065	N8067	-----	M9565	M9567
6-7"	6-7"	H7075	H7087	-----	N8075	N8087	-----	M9575	M9587
<b>97-06 Wrangler TJ / Unlimited / Rubicon 4WD (TJ Rear Shock Relocation Brackets Available, Part# TJRSB10)</b>									
0"	0"	-----	H7008	-----	-----	N8008	-----	-----	M9508
0-3"	1-3"	H7016	H7018	-----	N8016	N8018	-----	M9516	M9518
3.5-4"	3.5-4"	H7025	H7028	-----	N8025	N8028	-----	M9525	M9528
6-9"	6-8"	H7049	H7063	-----	N8049	N8063	-----	M9549	M9563
<b>87-96 Wrangler YJ 4WD</b>									
0-1"	0"	H7055	H7012	-----	N8055	N8012	-----	M9555	M9512
2-2.5"	1-2.5"	H7056	H7023	-----	N8056	N8023	-----	M9556	M9523
3.5-4"	3-6"	H7059	H7088	-----	N8059	N8088	-----	M9559	M9588
5-6"	3-6"	H7061	H7088	-----	N8061	N8088	-----	M9561	M9588
<b>82-86 CJ5, CJ7 &amp; Scrambler 4WD</b>									
0-2.5"	0-2.5"	H7012	H7023	-----	N8012	N8023	-----	M9512	M9523
3-5"	3-5"	H7023	H7058	-----	N8023	N8058	-----	M9523	M9558
<b>76-81 CJ5, CJ7 &amp; Scrambler 4WD</b>									
0-2.5"	0"	H7012	H7012	-----	N8012	N8012	-----	M9512	M9512
0-2.5"	1-3"	H7012	H7023	-----	N8012	N8023	-----	M9512	M9523
3-5"	1-3"	H7023	H7023	-----	N8023	N8023	-----	M9523	M9523
3-5"	3.5-5.5"	H7023	H7058	-----	N8023	N8058	-----	M9523	M9558
<b>55-75 CJ5, CJ6, 3B &amp; M38A1 4WD</b>									
0-1"	0"	H7012	H7012	-----	N8012	N8012	-----	M9512	M9512
1.5-2.5"	1-3"	H7023	H7023	-----	N8023	N8023	-----	M9523	M9523
3-5"	3.5-5.5"	H7058	H7058	-----	N8058	N8058	-----	M9558	M9558
<b>41-63 MB, M38, CJ2A, CJ3A &amp; CJ3B 4WD</b>									
0-1"	0-1"	H7012	H7012	-----	N8012	N8012	-----	M9512	M9512
<b>All U.S. Post Office Jeep FJ8A &amp; FJ9 2WD</b>									
0"	0"	H7012	H7012	-----	N8012	N8012	-----	M9512	M9512
<b>02-12 Liberty KJ 4WD, 2WD</b>									
-----	2.5"	-----	H7088	-----	-----	N8088	-----	-----	M9558



# SHOCK APPLICATION GUIDE

Lift Height		HYDRO		Front	NITRO		Front	MONOTUBE	
Front	Rear	Front	Rear	Dual	Front	Rear	Dual	Front	Rear
<b>84-01 Cherokee XJ 4WD, 2WD</b>									
0-3"	0"	H7016	H7008	----	N8016	N8008	----	M9516	M9508
0-3"	1-3"	H7016	H7018	----	N8016	N8018	----	M9516	M9518
4-5"	4-5"	H7025	H7028	----	N8025	N8028	----	M9525	M9528
6-8"	5-8"	H7049	H7063	----	N8049	N8063	----	M9549	M9563
<b>06-10 Commander XK 4WD, 2WD</b>									
----	0"	----	H7088	----	----	N8088	----	----	M9558
<b>05-12 Grand Cherokee WK 4WD, 2WD</b>									
----	0"	----	H7088	----	----	N8088	----	----	M9558
<b>99-04 Grand Cherokee WJ 4WD, 2WD</b>									
0"	0"	H7015	H7042	----	N8015	N8042	----	M9515	M9542
2-3"	2-3"	H7016	H7044	----	N8016	N8044	----	M9516	M9544
<b>93-98 Grand Cherokee ZJ 4WD, 2WD</b>									
0-3"	0-3"	H7016	H7023	----	N8016	N8023	----	M9516	M9523
4-5"	4-5"	H7025	H7058	----	N8025	N8058	----	M9525	M9558
<b>84-91 Grand Wagoneer 4WD - Full-Size</b>									
0-1"	0-1"	H7012	H7012	----	N8012	N8012	----	M9512	M9512
2-3"	2-3"	H7023	H7023	----	N8023	N8023	----	M9523	M9523
4-5"	4-5"	H7088	H7088	----	N8088	N8088	----	M9558	M9558
<b>74-83 Cherokee, Wagoneer 4WD - Full-Size</b>									
0-1"	0-1"	H7012	H7012	----	N8012	N8012	----	M9512	M9512
2-3"	2-3"	H7023	H7023	----	N8023	N8023	----	M9523	M9523
4-5"	4-5"	H7088	H7088	----	N8088	N8088	----	M9558	M9558
<b>86-92 Comanche MJ 4WD, 2WD</b>									
0-3"	0-3"	H7016	H7023	----	N8016	N8023	----	M9516	M9523
4-5"	4-5"	H7025	H7058	----	N8025	N8058	----	M9525	M9558
<b>74-88 J10, J20 Pickup 4WD</b>									
0-1"	0-1"	H7012	H7012	----	N8012	N8012	----	M9512	M9512
2-3"	2-3"	H7023	H7023	----	N8023	N8023	----	M9523	M9523
<b>74-88 J10, J20 Pickup 4WD</b>									
4-5"	4-5"	H7088	H7088	----	N8088	N8088	----	M9558	M9558
<b>63-73 Wagoneer 4WD</b>									
2-3"	2-4"	H7058	H7023	----	N8058	N8023	----	M9558	M9523
<b>69-73 Jeepster, C101 &amp; Commando 4WD</b>									
0-2"	0-2"	H7012	H7023	----	N8012	N8023	----	M9512	M9523
3-4"	3-4"	H7023	H7058	----	N8023	N8058	----	M9523	M9558
<b>47-62 Utility Wagon 4WD</b>									
2-4"	2-4"	H7012	H7023	----	N8012	N8023	----	M9512	M9523
<b>63-73 Gladiator 4WD</b>									
0-1"	0-1"	H7012	H7012	----	N8012	N8012	----	M9512	M9512
2-3"	2-3"	H7058	H7023	----	N8058	N8023	----	M9558	M9523
<b>47-62 Utility Truck 4WD</b>									
1.5-2"	1.5-2"	H7012	H7012	----	N8012	N8012	----	M9512	M9512
<b>LINCOLN</b>									
<b>Mark LT 4WD</b>									
----	0-2.5"	----	H7041	----	----	N8041	----	----	M9541
<b>MAZDA</b>									
<b>94-97 B4000 4WD</b>									
0-2"	0-4"	H7052	H7060	----	N8052	N8060	----	M9552	M9560
3-4"	0-4"	H7054	H7060	----	N8054	N8060	----	M9554	M9560
5-6"	0-4"	H7055	H7060	----	N8055	N8060	----	M9555	M9560
<b>87-93 B2600 4WD</b>									
0-2"	0-1"	H7052	H7027	----	N8052	N8027	----	M9552	M9527
<b>90-94 Navajo 4WD</b>									
0-2"	0-2"	H7052	H7029	----	N8052	N8029	----	M9552	M9529
3-4"	3-8"	H7054	H7039	----	N8054	N8039	----	M9554	M9539
5-8"	3-8"	H7055	H7039	----	N8055	N8039	----	M9555	M9539
<b>94-97 B Series 2WD</b>									
0-2"	0-3.5"	H7052	H7058	----	N8052	N8058	----	M9552	M9558
3-4"	0-3.5"	H7054	H7058	----	N8054	N8058	----	M9554	M9558
5-8"	4-8"	H7055	H7060	----	N8055	N8060	----	M9555	M9560
<b>86-93 B-2000 &amp; B-2200 2WD</b>									
0-2"	0"	H7052	H7012	----	N8052	N8012	----	M9552	M9512

# SHOCK APPLICATION GUIDE

Lift Height		HYDRO		Front	NITRO		Front	MONOTUBE	
Front	Rear	Front	Rear	Dual	Front	Rear	Dual	Front	Rear
<b>85-89 Montero 4WD with 4 Cylinder Engine</b>									
1-2"	1-2"	H7013	H7023	----	N8013	N8023	----	M9513	M9523
<b>83-84 Montero 4WD</b>									
1-2"	1-2"	H7013	H7023	----	N8013	N8023	----	M9513	M9523
<b>83-91 Pickup 4WD</b>									
1-2"	1-2"	H7013	H7058	----	N8013	N8058	----	M9513	M9558
<b>NISSAN</b>									
<b>86.5-93 Pathfinder &amp; Terrano 4WD, 2WD</b>									
0-1"	0-1"	H7052	H7023	----	N8052	N8023	----	M9552	M9523
2-4"	2-4"	H7054	H7041	----	N8054	N8041	----	M9554	M9541
<b>86.5-92 Hardbody 4WD</b>									
2-3"	1-2"	H7052	H7023	----	N8052	N8023	----	M9552	M9523
4-5"	3-4"	H7054	H7058	----	N8054	N8058	----	M9554	M9558
<b>83.5-86 Pickup 4WD</b>									
1-2"	0-1"	H7052	H7023	----	N8052	N8023	----	M9552	M9523
<b>87-93 Pickup 2WD</b>									
1-2"	0-1"	H7052	H7023	----	N8052	N8023	----	M9552	M9523
<b>SCOUT</b>									
<b>72-82 Scout II, Terra &amp; Traveler 4WD</b>									
0-1"	0-1"	H7054	H7012	----	N8054	N8012	----	M9554	M9512
2-4"	2-4"	H7055	H7058	----	N8055	N8058	----	M9555	M9558
<b>61-71 Scout 80 &amp; 800 4WD</b>									
0-1"	0-1"	H7012	H7054	----	N8012	N8054	----	M9512	M9554
<b>SUZUKI</b>									
<b>85-92 Samurai / Santana 4WD</b>									
0-2"	0-2"	H7052	H7012	----	N8052	N8012	----	M9552	M9512
3-4"	3-4"	H7054	H7023	----	N8054	N8023	----	M9554	M9523
<b>85-88 LJ10, SJ10 &amp; LJ413 4WD</b>									
0-1"	0-1"	H7054	H7012	----	N8054	N8012	----	M9554	M9512
<b>82-85 LJ413 4WD</b>									
0-1"	0-1"	H7052	H7012	----	N8052	N8012	----	M9552	M9512
<b>TOYOTA</b>									
<b>05-14 HiLux / Tiger / Vigo 4WD</b>									
----	0-1.5"	----	H7027	----	----	N8027	----	----	M9527
<b>05-15 Tacoma 4WD &amp; Pre-Runner 2WD</b>									
----	0-1"	----	H7048	----	----	N8048	----	----	M9548
----	1.5"	----	H7045	----	----	N8045	----	----	M9545
<b>95.5-04 Tacoma 4WD &amp; Pre-Runner 2WD</b>									
----	0-3"	----	H7027	----	----	N8027	----	----	M9527
<b>07-15 Tundra 2WD / 4WD</b>									
----	0-2"	----	H7062	----	----	N8062	----	----	M9562
----	4-5"	----	H7066	----	----	N8066	----	----	M9566
<b>00-06 Tundra 4WD</b>									
----	1-2.5"	----	H7048	----	----	N8048	----	----	M9548
<b>93-98 T100 4WD</b>									
0-2"	0-1"	H7002	H7058	----	N8002	N8058	----	M9502	M9558
3-4"	2-4"	H7004	H7060	----	N8004	N8060	----	M9504	M9560
<b>86-95 Pickup 4WD</b>									
0-2"	0-2"	H7002	H7047	----	N8002	N8047	----	M9502	M9547
3-4"	3-4"	H7004	H7027	----	N8004	N8027	----	M9504	M9527
<b>84-85 Pickup 4WD</b>									
0-1"	0-1"	H7052	H7047	----	N8052	N8047	----	M9552	M9547
1.5-2.5"	0-1"	H7054	H7047	----	N8054	N8047	----	M9554	M9547
3-4"	1.5-3.5"	H7055	H7027	----	N8055	N8027	----	M9555	M9527
5-6"	4-8.5"	H7055	H7036	----	N8055	N8036	----	M9555	M9536
7-8"	4-8.5"	H7056	H7036	----	N8056	N8036	----	M9556	M9536
<b>79-83 Pickup 4WD</b>									
0-1"	0-2"	H7052	H7058	----	N8052	N8058	----	M9552	M9558
1.5-2.5"	0-2"	H7054	H7058	----	N8054	N8058	----	M9554	M9558
3-4"	0-2"	H7055	H7058	----	N8055	N8058	----	M9555	M9558
5-6"	3-7"	H7055	H7060	----	N8055	N8060	----	M9555	M9560
7-8"	3-7"	H7056	H7060	----	N8056	N8060	----	M9556	M9560

# SHOCK APPLICATION GUIDE

Lift Height		HYDRO		Front	NITRO		Front	MONOTUBE	
Front	Rear	Front	Rear	Dual	Front	Rear	Dual	Front	Rear
<b>96-01 4Runner 4WD</b>									
-----	0-2.5"	-----	H7022	-----	-----	N8022	-----	-----	M9522
<b>90-95 4Runner 4WD, 2WD</b>									
0-2"	0-2"	H7002	H7022	-----	-----	N8002	N8022	-----	M9502
3-4"	3-4"	H7004	H7024	-----	-----	N8004	N8024	-----	M9504
<b>86-89 4Runner 4WD</b>									
0-2"	0-2"	H7002	H7047	-----	-----	N8002	N8047	-----	M9502
3-4"	3-4"	H7004	H7027	-----	-----	N8004	N8027	-----	M9504
<b>84-85 4Runner 4WD</b>									
0-1"	0-1"	H7052	H7047	-----	-----	N8052	N8047	-----	M9552
1.5-2.5"	0-1"	H7054	H7047	-----	-----	N8054	N8047	-----	M9554
3-4"	1.5-3.5"	H7055	H7027	-----	-----	N8055	N8027	-----	M9555
5-6"	4-8.5"	H7055	H7036	-----	-----	N8055	N8036	-----	M9555
7-8"	4-8.5"	H7056	H7036	-----	-----	N8056	N8036	-----	M9556
<b>07-14 FJ Cruiser 4WD</b>									
-----	1.5"-2.5"	-----	H7098	-----	-----	N8098	-----	-----	
<b>84-87 LandCruiser 60 Series 4WD (Model FJ60)</b>									
0"	0"	H7091	H7047	-----	-----	N8091	N8047	-----	M9591
<b>81-83 LandCruiser 60 Series 4WD (Model FJ60)</b>									
0"	0"	H7091	H7023	-----	-----	N8091	N8023	-----	M9591
<b>84-89 LandCruiser BJ70, BJ71, BJ73 &amp; BJ75 4WD</b>									
0-1"	0-1"	H7091	H7047	-----	-----	N8091	N8047	-----	M9591
<b>91-97 LandCruiser FJ80 4WD</b>									
-----	0-2"	-----	H7024	-----	-----	N8024	-----	-----	M9524
<b>86-89 LandCruiser FJ60 4WD</b>									
0-2"	0-2"	H7022	H7047	-----	-----	N8022	N8047	-----	M9522
<b>88-89 LandCruiser HJ40 4WD</b>									
0"	0"	H7091	H7047	-----	-----	N8091	N8047	-----	M9591
<b>64-84 LandCruiser FJ40, BJ40 &amp; BJ42 4WD</b>									
0-2"	0-2"	H7012	H7023	-----	-----	N8012	N8023	-----	M9512
3-4"	3-4"	H7023	H7041	-----	-----	N8023	N8041	-----	M9523
5-6"	5-6"	H7023	H7060	-----	-----	N8023	N8060	-----	M9523
<b>94-95 LandCruiser KZJ70 &amp; KZJ73 4WD</b>									
0"	0"	H7091	H7047	-----	-----	N8091	N8047	-----	M9591
<b>90-93 LandCruiser LJ70 &amp; LJ73 4WD</b>									
0"	0"	H7091	H7047	-----	-----	N8091	N8047	-----	M9591
<b>64-81 Wagon FJ43 &amp; FJ45 4WD</b>									
0-1.5"	0-1.5"	H7012	H7023	-----	-----	N8012	N8023	-----	M9512

# FRONT MULTIPLE SHOCK APPLICATION GUIDE

LIFT	TYPE	PART #	QTY.	SHOCK	NOTES
<b>NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY</b>					
<b>CHEVROLET/GMC</b>					
<b>67-91 1/2, 3/4, &amp; 1 Ton Pickup, Blazer, Jimmy &amp; Suburban 4WD</b>					
0-1.5"	Dual Front	DS250	2	H7021	
2-5"	Dual Front	DS250	2	H7051	
6-8"	Dual Front	DS250	2	H7071	
9-12"	Dual Front	DS250	2	H7032	
<b>DODGE</b>					
<b>03-12 2500/3500 Ram Pickup 4WD</b>					
2.5"	Dual Front	DS393	2	H7058	
4.5-5"	Dual Front	DS393	2	H7041	
<b>94-01 1/2 &amp; 3/4 Ton Ram Pickup 4WD</b>					
0-1"	Dual Front	DS390	2	H7023	
2-3"	Dual Front	DS390	2	H7023	
4-6"	Dual Front	DS390	2	H7058	
<b>94-01 3/4 HD &amp; 1 Ton Ram Pickup</b>					
0-1"	Dual Front	DS390	2	H7023	
1.5-3"	Dual Front	DS390	2	H7058	
4-5"	Dual Front	DS390	2	H7041	
<b>74.5-93 1/2, 3/4 &amp; 1 Ton Pickup, 74.5-93 Ramcharger / Trailduster 4WD</b>					
0-1"	Dual Front	DS350	2	H7023	
1.5-3"	Dual Front	DS350	2	H7058	
4-6"	Dual Front	DS350	2	H7041	
7-8"	Dual Front	DS350	2	H7060	
<b>FORD</b>					
<b>80-96 F-100, F-150 &amp; Bronco 4WD</b>					
0-2"	Dual Front	DS280	2	H7052	
3-4"	Dual Front	DS280	2	H7054	
5-8"	Dual Front	DS280	2	H7055	
<b>77-79 F-100, F-150 4WD</b>					
0-2"	Dual Front	DS260	2	H7054	
3-4"	Dual Front	DS260	2	H7055	
5-6"	Dual Front	DS260	2	H7056	
7-9"	Dual Front	DS260	2	H7059	
<b>70-76 F-100, F-150 4WD</b>					
0-1"	Dual Front	DS260	2	H7052	
1.5-2"	Dual Front	DS260	2	H7054	
2.5-4"	Dual Front	DS260	2	H7055	
5-6"	Dual Front	DS260	2	H7055	
7-9"	Dual Front	DS260	2	H7061	
<b>00-05 Excursion 4WD &amp; 99-04 F-250 &amp; F-350 Super Duty 4WD</b>					
0-3"	Triple Front	TS950	4	H7012	A9
4-5"	Triple Front	TS950	4	H7058	A9
6-8"	Triple Front	TS950	4	H7041	A9
KIT NOTES: A9. This Kit Adds 2 Shocks Per Side & Requires the Use of OEM Position Front Shock.					
<b>87-98 F-250 4WD - IFS</b>					
0-2"	Triple Front	TS450	4	H7012	
3-6"	Triple Front	TS450	4	H7058	
<b>80-86 F-250 4WD - IFS</b>					
0-2"	Triple Front	TS450	4	H7012	
3-6"	Triple Front	TS450	4	H7023	
<b>77.5-79 F-250 4WD</b>					

LIFT	TYPE	PART #	QTY.	SHOCK	NOTES
4-7"	Dual Front	DS300	2	N8014	
<b>66-77 F-250 High Boy 4WD</b>					
2-4"	Dual Front	DS310	2	N8014	
<b>80-96 F-250 &amp; F-350 2WD</b>					
0-2"	Dual Front	DS280	2	H7052	
3-4"	Dual Front	DS280	2	H7054	
5-8"	Dual Front	DS280	2	H7055	
<b>86-98 F-350 4WD with Straight Axle</b>					
0-2"	Triple Front	TS450	4	H7012	
3-4"	Triple Front	TS450	4	H7058	
5-6"	Triple Front	TS450	4	H7041	
<b>80-85 F-350 4WD - IFS</b>					
0-2"	Triple Front	TS450	4	H7012	
3-6"	Triple Front	TS450	4	H7023	
<b>83-97 Ranger &amp; Bronco II 4WD, 2WD, 94-97 Mazda B4000 4WD, 2WD</b>					
0-2"	Dual Front	DS220	2	H7052	
3-4"	Dual Front	DS220	2	H7054	
5-8"	Dual Front	DS220	2	H7055	
<b>90-94 Explorer 4WD, 2WD, 90-94 Mazda Navajo 4WD, 2WD</b>					
0-2"	Dual Front	DS220	2	H7052	
3-4"	Dual Front	DS220	2	H7054	
5-8"	Dual Front	DS220	2	H7055	

# REAR MULTIPLE SHOCK APPLICATION GUIDE

LIFT	TYPE	PART #	QTY.	SHOCK	NOTES
NOTE: ALL SHOCKS MUST BE ORDERED SEPARATELY					
<b>CHEVROLET/GMC</b>					
<b>73-87 1/2 Ton Pickup 4WD</b>					
0-1.5"	Dual Rear	DS440	2	H7043	
2-4"	Dual Rear	DS440	2	H7053	
4.5-8"	Dual Rear	DS440	2	H7073	
<b>73-87 3/4 Ton Pickup 4WD</b>					
0-1.5"	Dual Rear	DS445	2	H7043	
2-4"	Dual Rear	DS445	2	H7053	
4.5-8"	Dual Rear	DS445	2	H7073	
<b>77-87 1 Ton Pickup 4WD</b>					
0-1.5"	Dual Rear	DS445	2	H7053	
2-4"	Dual Rear	DS445	2	H7073	
4.5-10"	Dual Rear	DS445	2	H7078	
<b>67-72 1/2 &amp; 3/4 Ton Pickup 4WD</b>					
0-1.5"	Dual Rear	DS442	2	H7043	
2-4"	Dual Rear	DS442	2	H7053	
4.5-8"	Dual Rear	DS442	2	H7073	
<b>73-87 Blazer, Jimmy Full-Size 4WD</b>					
0-1.5"	Dual Rear	DS440	2	H7043	
2-4"	Dual Rear	DS440	2	H7053	
4.5-8"	Dual Rear	DS440	2	H7073	
<b>67-72 Blazer, Jimmy Full-Size 4WD</b>					
0-1.5"	Dual Rear	DS442	2	H7043	
2-4"	Dual Rear	DS442	2	H7053	
4.5-8"	Dual Rear	DS442	2	H7073	
<b>73-91 Suburban 4WD - 1/2 Ton</b>					
0-1.5"	Dual Rear	DS440	2	H7043	
2-4"	Dual Rear	DS440	2	H7053	
4.5-8"	Dual Rear	DS440	2	H7073	
<b>73-91 Suburban 4WD - 3/4 Ton</b>					
0-1.5"	Dual Rear	DS445	2	H7043	
2-4"	Dual Rear	DS445	2	H7053	
4.5-8"	Dual Rear	DS445	2	H7073	
<b>67-72 Suburban 4WD</b>					
0-1.5"	Dual Rear	DS442	2	H7043	
2-4"	Dual Rear	DS442	2	H7053	
4.5-8"	Dual Rear	DS442	2	H7073	
<b>DODGE</b>					
<b>69-93 1/2, 3/4 &amp; 1 Ton Pickup, 69-93 Ramcharger / Trailduster 4WD</b>					
0-3.5"	Dual Rear	DS360	2	H7060	
4-8"	Dual Rear	DS360	2	H7079	
<b>FORD</b>					
<b>80-96 F-100, F-150 4WD - Except with Dual Gas Tanks</b>					
0-1"	Dual Rear	DS360	2	H7058	
1.5-5"	Dual Rear	DS360	2	H7060	
6-9"	Dual Rear	DS360	2	H7079	
<b>70-79 F-100, F-150 4WD</b>					
0-1"	Dual Rear	DS360	2	H7023	
1.5-2"	Dual Rear	DS360	2	H7041	
3.5-4"	Dual Rear	DS360	2	H7041	
5-8"	Dual Rear	DS360	2	H7060	
<b>80-96 F-150 2WD</b>					
0-3.5"	Dual Rear	DS360	2	H7058	
4-8"	Dual Rear	DS360	2	H7060	
<b>80-96 Bronco 4WD, 2WD</b>					
0-3.5"	Dual Rear	DS360	2	H7058	
4-8"	Dual Rear	DS360	2	H7060	

LIFT	TYPE	PART #	QTY.	SHOCK	NOTES
<b>78-79 Bronco 4WD</b>					
0"	Dual Rear	DS360	2	H7012	
1-2"	Dual Rear	DS360	2	H7023	
3-5"	Dual Rear	DS360	2	H7058	
6-10"	Dual Rear	DS360	2	H7060	
<b>67-77 Bronco 4WD</b>					
0"	Dual Rear	-----	2	H7012	
1-2.5"	Dual Rear	-----	2	H7023	
3.5-5"	Dual Rear	-----	2	H7058	
5.5-10"	Dual Rear	-----	2	H7060	
<b>80-96 F-250 4WD - Except with Dual Gas Tanks</b>					
0-1"	Dual Rear	DS360	2	H7058	
1.5-5"	Dual Rear	DS360	2	H7060	
5.5-8"	Dual Rear	DS360	2	H7079	
<b>77.5-79 F-250 4WD - Except with Dual Gas Tanks</b>					
0"	Dual Rear	DS360	2	H7058	
1-3"	Dual Rear	DS360	2	H7041	
3.5-6"	Dual Rear	DS360	2	H7060	
<b>66-77 F-250 High Boy 4WD - Except with Dual Gas Tanks</b>					
0-4"	Dual Rear	DS360	2	H7041	
<b>80-96 F-250 &amp; F-350 2WD</b>					
0-3.5"	Dual Rear	DS360	2	H7058	
4-8"	Dual Rear	DS360	2	H7060	
<b>80-98 F-350 High Boy 4WD - Except with Dual Gas Tanks</b>					
0-4"	Dual Rear	DS360	2	H7060	
4.5-8"	Dual Rear	DS360	2	H7079	
<b>83-97 Ranger 4WD</b>					
0-1"	Dual Rear	-----	2	H7058	
1.5-4"	Dual Rear	-----	2	H7060	
4.5-8"	Dual Rear	-----	2	H7079	
<b>83-97 Ranger 2WD</b>					
0-3.5"	Dual Rear	-----	2	H7058	
4-8"	Dual Rear	-----	2	H7060	
<b>83-90 Bronco II 4WD, 2WD</b>					
0-3.5"	Dual Rear	-----	2	H7058	
4-8"	Dual Rear	-----	2	H7060	








# SHOCK SPECIFICATIONS GUIDE

SHOCKS SERIES			LENGTHS		MOUNTING CODES			
HYDRO	NITRO	Monotube	EXTENDED	COLLAPSED	UPPER	LOWER	OPTION	NOTES
H7002	N8002	M9502	15.69	10.02	S1	ES113	EB4	
H7003	N8003	M9503	18.5	12.25	S1	Clevis		
H7004	N8004	M9504	18.66	11.52	S1	ES60, ES113	EB4	
	N8005		21.25	13.05	S1	ES25	EB1	
H7006	-----	-----	16.14	10.15	S1	BP4	EB1	A2
SHOCK NOTE: A2. Slim Body - 2"								
	N8007		22.58	13.71	BP12	ES25	EB1, EB1	
H7008	N8008	M9508	19.07	12.07	BP18	ES24	EB1, EB1	
H7009	N8009	M9509	15.35	10.33	S1	Clevis		
H7010	-----	-----	16.14	10.15	S1	ES34	EB4	A2
SHOCK NOTE: A2. Slim Body - 2"								
H7011	N8011	M9511	19.07	12.07	EB7	ES24	EB1, EB1	
H7012	N8012	M9512	19.07	12.07	ES25	ES25	EB1, EB1	
H7013	N8013	M9513	15.69	10.02	S1	BP4	EB1	
-----	N8014	M9514	27.01	15.06	S1	S1		
H7015	N8015	M9515	18.66	11.52	S1	BP4	EB1	
H7016	N8016	M9516	22.75	13.54	S1	BP4	EB1	
H7017	N8017	M9517	27.07	15.94	ES34	ES34	EB4, EB4	
H7018	N8018	M9518	22.58	13.71	BP18	ES24	EB1, EB1	
H7019	N8019	M9519	15.69	10.02	S1	ES34, ES60	EB4	
H7020	-----	-----	16.14	10.15	S1	BP13	EB1	A2
SHOCK NOTE: A2. Slim Body - 2"								
H7021	N8021	M9521	19.07	12.07	ES31	ES24	EB1	
H7022	N8022	M9522	22.75	13.54	S1	EB4		
H7023	N8023	M9523	22.58	13.71	ES25	ES25	EB1, EB1	
H7024	N8024	M9524	24.75	14.54	S1	EB4		
H7025	N8025	M9525	24.75	14.54	S1	BP4	EB1	
H7027	N8027	M9527	24.84	14.82	ES34	ES34	EB4, EB4	
H7028	N8028	M9528	24.84	14.82	BP18	ES24	EB1, EB1	A2
SHOCK NOTE: A2. Slim Body - 2"								
H7029	N8029	M9529	24.84	14.82	BP8	ES25	EB1, EB1	
H7030	N8030	M9530	26.57	15.69	ES34	ES34	EB4, EB4	A2
SHOCK NOTE: A2. Slim Body - 2"								
H7032	N8032	M9532	29.83	17.32	ES31	ES24	EB1	
H7034	N8034	M9534	29.83	17.32	BP8	ES25	EB1, EB1	
H7035	N8035	M9535	22.75	13.54	S1	ES25	EB1	
H7036	N8036	M9536	29.83	17.32	ES34	ES34	EB4, EB4	
H7037	N8037	M9537	25.35	15.05	BP12	ES25	EB1, EB1	A2
SHOCK NOTE: A2. Slim Body - 2"								
H7038	N8038	M9538	29.83	17.32	ES27	ES34	EB1, EB4	
H7040	N8040		18.12	11.28	S1	ES37		A1
SHOCK NOTE: A1. Slim Body - 1.86"								
H7041	N8041	M9541	26.07	15.57	ES25	ES25	EB1, EB1	
H7042	N8042	M9542	22.58	13.71	ES82	ES24	EB1, EB1	
H7043	N8043	M9543	24.84	14.82	EB7	ES34	EB1, EB4	
H7044	N8044	M9544	24.84	14.82	ES82	ES24	EB1, EB1	
H7045	N8045	M9545	24.75	14.54	S1	ES22		
H7047	N8047	M9547	22.58	13.71	ES34	ES34	EB4, EB4	
H7048	N8048	M9548	22.75	13.54	S1	ES22		
H7049	N8049	M9549	28.75	16.56	S1	BP4	EB1	
H7051	N8051	M9551	22.58	13.71	ES31	ES24	EB1	
H7052	N8052	M9552	15.69	10.02	S1	ES25	EB1	
H7053	N8053	M9553	27.07	15.94	EB7	ES34	EB1, EB4	
H7054	N8054	M9554	18.66	11.52	S1	ES25	EB1	
H7055	N8055	M9555	22.75	13.54	S1	ES25	EB1	
H7056	N8056	M9556	24.75	14.54	S1	ES25	EB1	
H7057	N8057	M9557	26.79	15.56	S1	ES25	EB1	A2
SHOCK NOTE: A2. Slim Body - 2"								
H7058	N8058	M9558	24.84	14.82	ES25	ES25	EB1, EB1	
H7059	N8059	M9559	28.75	16.56	S1	ES25	EB1	
H7060	N8060	M9560	29.83	17.32	ES25	ES25	EB1, EB1	
H7061	N8061	M9561	30.46	17.42	S1	ES25	EB1	
H7062	N8062		25.75	15.44	S38	ES25	EB1	

# SHOCK SPECIFICATIONS GUIDE

SHOCKS SERIES			LENGTHS		MOUNTING CODES			
HYDRO	NITRO	Monotube	EXTENDED	COLLAPSED	UPPER	LOWER	OPTION	NOTES
H7063	N8063	M9563	27.07	15.94	BP18	ES24	EB1, EB1	A2
SHOCK NOTE: A2. Slim Body - 2"								
	N8064		31.5	18.25	ES34	ES34	EB4, EB4	
H7065	N8065	M9565	24.79	14.56	S1	ES25	EB1	
H7066	N8066	M9566	28.75	16.50	S38	ES25	EB1	
H7067	N8067	M95067	26.80	15.91	BP12	ES25	EB1, EB1	A2
SHOCK NOTE: A2. Slim Body - 2"								
H7068	N8068	M9568	34	20.27	ES27	ES34	EB4	
H7070	N8070	M9570	28.59	16.70	ES34	ES34	EB4, EB4	A2
SHOCK NOTE: A2. Slim Body - 2"								
H7071	N8071	M9571	26.07	15.57	ES31	ES24	EB1	
H7072	N8072	M9572	26.07	15.57	BP8	ES34	EB1, EB1	
H7073	N8073	M9573	29.83	17.32	EB7	ES34	EB1, EB4	
H7074	N8074	M9574	22.25	13.47	S38	ES34	ES60, EB4	A2
SHOCK NOTE: A2. Slim Body - 2"								
H7075	N8075	M9575	26.75	15.56	S1	ES25	EB1	
H7077	N8077	M9577	34	20.27	BP8	ES25	EB1, EB1	
H7078	N8078	M9578	34	20.27	EB7	ES34	EB1, EB4	
H7079	N8079	M9579	34	20.27	ES25	ES25	EB1, EB1	
H7080	-----	-----	14.5	9.68	EB7	ES24	EB1, EB1	
H7081	N8081	M9581	19.07	12.07	ES33	ES82	EB1	
H7082	N8082	M9582	19.07	12.07	ES82	ES82	EB1, EB1	
H7083	N8083	M9583	27.07	15.94	BP8	ES34	EB1, EB4	A2
SHOCK NOTE: A2. Slim Body - 2"								
H7084	N8084	M9584	24.84	14.82	BP8	ES34	EB1, EB4	
H7085	N8085	M9585	22.58	13.92	ES33	ES82	EB1	
H7086	N8086	M9586	29.83	17.32	BP8	ES34	EB1, EB4	
H7087	N8087	M9587	28.59	16.70	BP12	ES25	EB1, EB1	A2
SHOCK NOTE: A2. Slim Body - 2"								
H7088	N8088	M9558	24.84	14.82	ES25	ES25	EB1, EB1	A2
SHOCK NOTE: A2. Slim Body - 2"								
H7091	N8091	M9591	22.63	13.75	S38	ES34	EB4	
H7092	N8092	M9592	24.63	14.75	S38	ES34	EB4	
H7093	N8093	M9593	26.63	15.75	S38	ES34	EB4	
H7094	N8094	M9594	28.75	16.5	S38	ES34	EB4	
	N8095		24.28	19.75				
H7096	N8096	M9596	21.5	13.76	S1	Clevis		
H7097	N8097	M9597	23.5	13.92	S1	ES25	EB1	A2
SHOCK NOTE: A2. Slim Body - 2"								
H7098	N8098		24.75	15.84	S40	ES36		
H7099	N8099	M9599	35.375	21.625	ES25	ES25	EB1, EB1	
<b>STEERING STABILIZERS</b>								
STABILIZER SERIES			LENGTHS		MOUNTING CODES			
<b>WHITE</b>		<b>Silver</b>	EXTENDED	COLLAPSED	UPPER	LOWER	OPTION	NOTES
7000	-----	9000	23.9	14.35	EB1	EB1		
7202	-----	9202	20.62	12.62	EB1	EB1		A1
7400	-----	9400	19.38	12.11	EB1	EB1		
7500	-----	9500	17.06	10.48	S1	EB1		A1
7800	-----	9800	21.65	12.77	S1	S1		
7900	-----	9900	20.21	12.05	S1	S1		
SHOCK NOTE: A1. Slim Body - 1.86"								

# SHOCK SPECIFICATIONS GUIDE

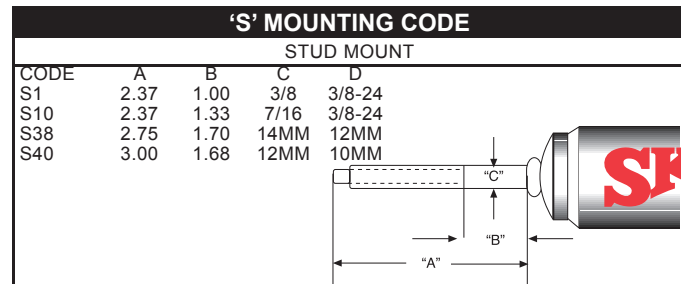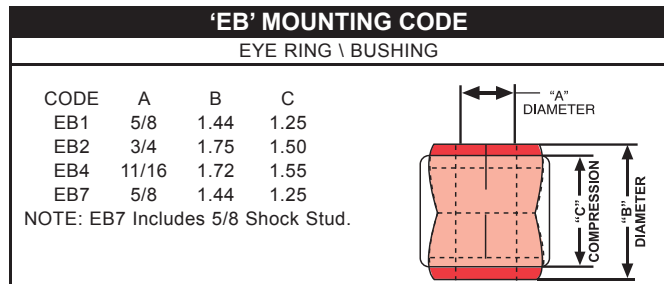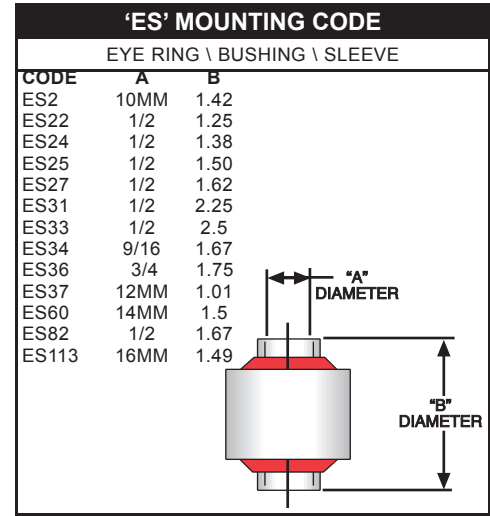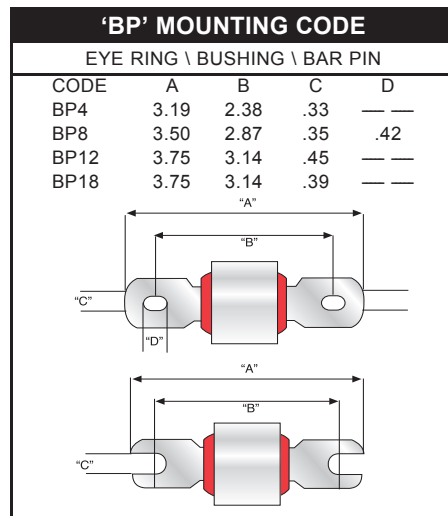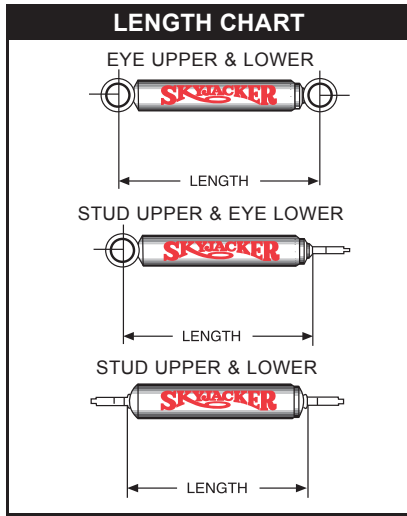

To order replacement hardware, please use mounting code part numbers listed under appropriate shock in Shock Specifications Guide.

For example:

ES25 = (1) Hourglass 5/8" bushing + (1) sleeve for (1) shock end

BP4 = (1) Hourglass 5/8" bushing + (1) bar pin for (1) shock end

Note: All mounting code hardware contains (1) bushing.

SHOCK & STABILIZER BOOTS		SHOCK & STABILIZER BOOTS		SHOCK & STABILIZER BOOTS	
Color	EACH	Color	EACH	Color	EACH
Blue	B10B	Hunter Green	B10HG	Red	B10R
Clear	B10CL	Black	B10K	Teal	B10TL
Hot Green	B10FG	Light Blue	B10LB	White	B10WH
Hot Pink	B10FP	Lavender	B10LV	Yellow	B10Y
Orange	B10OG	Purple	B10PR		
Gray	B10GY				



## SOFRIDE® LEAF SPRINGS Featured in Systems

**Softride® By Skyjacker®** Softride® springs use only American steel and the individual leaves of each spring are shot-peened with hard steel pellets at very high velocities. This shot-peening compresses the surface of the steel thereby increasing the tensile strength of the spring. Without this shot-peening procedure, the maximum wheel travel and ride quality could not be achieved without sacrificing the life of the spring. Softride® springs use 'bolt' style spring clips, eliminating friction. Other spring designs use the 'cinch' style bend clips which bend tightly over the spring leaves causing binding and friction. Skyjacker® Softride® springs taper over the entire length of the leaf creating more flex at the leaf ends. This tapering distributes loads more evenly over a greater area and reduces the tendency for one leaf to dig into the leaf above it.

Rear Softride® springs are used to complete the 'SYSTEM' in a Skyjacker® suspension lift.



## BLOCKS AND U-BOLTS Featured in Kits

**Skyjacker® Blocks & U-Bolts** Skyjacker® utilizes Blocks and U-Bolts in its Kits to provide rear lift. The Skyjacker® U-Bolts are e-coated for corrosion resistance. These U-Bolts are offered in various shapes and sizes such as square, round, and semi-round in lengths ranging from 1.75" - 19". The Blocks used in Skyjacker® Kits are Ductile iron with fixed center pins. They are also tapered to correct pinion angle and prevent driveline vibrations. Available in 1.25, 2, 3.5, 4.5 & 5 inches.

Rear Block & U-Bolt Kits are usually used to make a 'KIT' in a Skyjacker® suspension lift. But a 'KIT' could also be a combination of Blocks & U-Bolts or Add-a-Leafs.

### SKYJACKER® BLOCKS


- Ductile iron
- Fixed Center Pin
- Tapered



## ADD-A-LEAFS SPRINGS Featured in Kits

**Skyjacker® Add-A-Leafs** Skyjacker® offers a diverse selection of front and rear Add-a-Leafs. Skyjacker® Add-A-Leafs insert directly into your factory leaf spring providing lift and added strength. Softride® Add-a-Leafs use only American steel and are shot-peened with hard steel pellets at very high velocities. This shot-peening compresses the surface of the steel thereby increasing the tensile strength of the leaf. Without this shot-peening procedure, the maximum wheel travel and ride quality could not be achieved without sacrificing the life of the leaf. The Skyjacker® Add-a-Leafs are pre-drilled for the center pin. Pin location varies with each application. Most have long tapered ends for a progressive affect and ride comfort.

Rear Add-A-Leafs are sometimes used to make a 'KIT' in a Skyjacker® suspension lift. But it could also be a combination of Blocks & U-Bolts AND Add-a-Leafs.

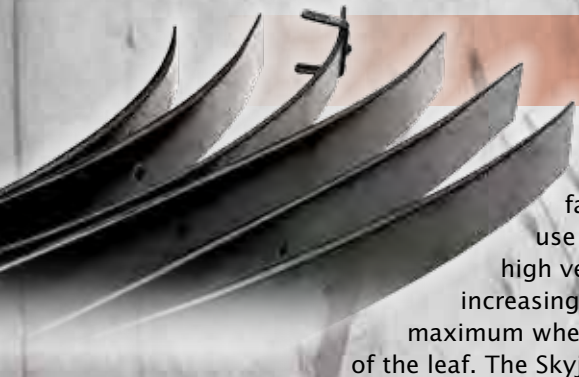

## SKYJACKER® STEERING COMPONENTS

**Skyjacker® Steering Components** Skyjacker® knows the importance of steering correction after lifting a vehicle and we have an extensive line of steering components to prove it. From drag links to a variety of steering arms, Skyjacker® has the steering components to steer you straight. Check out our complete list of steering components on-line at skyjacker.com to see what Skyjacker® has designed to fit your needs.



## SPACER KITS

**Spacer Kits** are in high demand and produce optimum results for the amount of money spent. Specifically designed for an array of vehicles, these Spacer Kits add 2-2.5" of lift to the struts or coil springs. Skyjacker® offers Poly Value Kits with polyurethane spacers & red powder coated steel fabricated units like for the Honda Ridgeline. They include all the parts & hardware necessary to bolt-on this simple, but effective lift. No cutting or welding is involved and standard tools get the job done.



## ASSORTED POLYURETHANE

**Polyurethane** Skyjacker® carries a very large line of Polyurethane products to fit your vehicle's needs. The list includes Bump Stops, Bushings, Cab Mount Kits, Clearance Kits, and an array of Bushings (Spring Eye, Frame Shackle, Radius Arm, Track Bar, Caster) for various applications, makes and models. Polyurethane is a superior material that has a higher load-bearing capacity and can better resist the dynamic torque-like twisting and turning forces of suspension components as they go through their normal operation/travel movements. It is also an improved sound/vibration dampening material.




## STAINLESS STEEL BRAIDED BRAKELINES

**D.O.T. Certified Stainless Steel Braided Brake Lines** Skyjacker® has gone to 'extended lengths' to accommodate our four wheeling friends and to improve your 4x4s braking performance. All have been tried and tested in some of the most severe conditions four wheeling has to offer in virtually every corner of the world. They all passed the test and are proven in their quality of engineering, workmanship and finish. Skyjacker® brake lines conform to all federal requirements of FMVSS106, making them D.O.T. Certified and T.U.V. Approved in Germany.



## STEERING STABILIZERS

**Skyjacker® Steering Stabilizer** A steering stabilizer is a dampening shock for your steering system. It dampens out the harshness of the highway, the 'shimmy' from running the additional weight of larger tires & wheels and places control back into the driver's hands. Stabilizers also reduce the fatigue of the driver on a personal level by reducing the amount of physical strength it takes to guide those larger tires on and off the road. Changing the weak stock unit for a better performing replacement or adding dual steering stabilizers is an inexpensive but worthy investment.

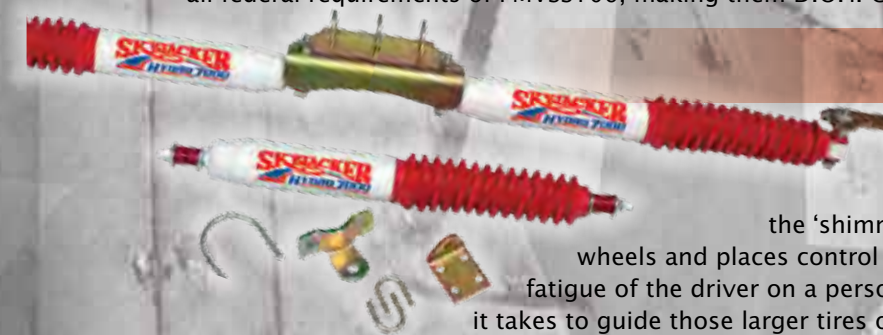

## JEEP CONTROL ARMS \ LINKS

**Standard Link** Control arms are fitted with greaseable polyurethane bushings on both ends of each link end.

**Value Flex** Control arms are fitted with greaseable polyurethane bushings on one end and a NG rebuildable rod end on the other.

**Rock Ready®** Series long arm links are 80% longer than stock, fitted with NG rebuildable rod ends with "Pivot Plus" inserts for maximum rotation.





# STEERING STABILIZERS

OEM REPLACEMENT, SINGLE & DUAL KITS									
	HEAVY DUTY OEM		SINGLE STABILIZER		DUAL STABILIZER		Single Cylinder used in kit without hardware		
	White	Silver	White	Silver	White	Silver	White	Silver	
<b>KIT NOTES: (S1). Slim Body - 1.86" (I). In-Line Mounting. (P). Parallel Mounting.</b>									
<b>CADILLAC</b>									
<b>00-06 1500 Cadillac Escalade, EXT, ESV 4WD</b>									
00-06 1500 Cadillac Escalade, EXT, ESV 4WD w/ Skyjacker® 3" Lift			7196	9196	7296	9296	7500	9500	
<b>CHEVROLET / GMC</b>									
<b>02-06 1500 Avalanche 4WD</b>									
02-06 Avalanche 1500 4WD with Skyjacker® 3" or 6" Lift			7196	9196			7500	9500	
02-06 Avalanche 1500 4WD with Skyjacker® 3" or 6" Lift					7296	9296	7500	9500	
<b>00-06 1500 Tahoe/Yukon 4WD</b>									
00-06 1500 Tahoe/Yukon 4WD with Skyjacker® 3" or 6" Lift			7196	9196	7296	9296	7500	9500	
<b>02-06 1500 Denali, Denali XL 4WD</b>									
02-06 1500 Denali, Denali XL 4WD with Skyjacker® 3" Lift			7196	9196			7500	9500	
02-06 1500 Denali, Denali XL 4WD with Skyjacker® 3" Lift					7296	9296	7500	9500	
<b>02-06 2500 Avalanche 4WD</b>									
02-06 Avalanche 2500 4WD	7098	9098					7202 (S1)	9202 (S1)	
02-06 Avalanche 2500 4WD with Skyjacker® 6" Lift					7298	9298	7500	9500	
<b>00-06 2500 Tahoe/Yukon 4WD</b>									
00-06 2500 Tahoe/Yukon 4WD	7098	9098					7202 (S1)	9202 (S1)	
00-06 2500 Tahoe/Yukon 4WD with Skyjacker® 6" Lift					7298	9298	7500	9500	
<b>11-15 2500HD/3500HD Pickup 4WD</b>									
11-15 2500HD/3500HD Pickup 4WD	7011 (B)	9011 (B)					7000	9000	
11-15 2500HD/3500HD Pickup 4WD with 4" or More Lift					7211 (B)(I)	9211 (B)(I)	7202 (S1)	9202 (S1)	
<b>01-10 2500HD/3500HD Pickup 4WD</b>									
01-10 2500HD/3500HD Pickup 4WD	7098	9098					7202 (S1)	9202 (S1)	
01-10 2500HD/3500HD Pickup 4WD with Skyjacker® 6" Lift					7298	9298	7500	9500	
<b>02-10 Hummer H2 4WD</b>									
02-10 Hummer H2 4WD	7098	9098					7202 (S1)	9202 (S1)	
02-10 Hummer H2 4WD with Skyjacker® 6" Lift					7298	9298	7500	9500	
<b>99-06 K1500 6-Lug Pickup 4WD</b>									
99-06 K1500 6-Lug Pickup 4WD with Skyjacker® 3" or 6" Lift			7196	9196	7296	9296	7500	9500	
<b>88-98 1/2 &amp; 3/4 Ton 6-Lug Pickup 4WD</b>									
88-98 1/2 & 3/4 Ton 6-Lug Pickup 4WD with 0-2.5" Lift			7122	9122			7800	9800	
<b>67-87 1/2 &amp; 3/4 Ton Pickup 4WD</b>									
67-87 1/2 & 3/4 Ton Pickup 4WD	7055	9055			7220 (I)	9220 (I)	7000	9000	
77-87 1 Ton Pickup 4WD	7055	9055			7255 (P)	9255 (P)	7000	9000	
77-87 1 Ton Pickup 4WD*	7055	9055			7255 (P)	9255 (P)	7000 7800	9000 9800	
*Check Stabilizer body to confirm replacement cylinder 4-digit number									
<b>92-98 Blazer\Tahoe, Jimmy\Yukon 4WD</b>									
92-98 Blazer\Tahoe, Jimmy\Yukon 4WD with 0-2.5" Lift			7122	9122			7800	9800	
<b>67-91 Blazer, Jimmy 4WD, 2WD</b>									
67-91 Blazer, Jimmy 4WD	7055	9055			7220 (I)	9220 (I)	7000	9000	
69-72 Blazer, Jimmy 4WD			7110	9110			7800	9800	
<b>00-06 2500 Suburban 4WD</b>									
00-06 2500 Tahoe/Yukon 4WD	7098	9098					7202 (S1)	9202 (S1)	
00-06 2500 Tahoe/Yukon 4WD with Skyjacker® 3" or 6" Lift					7298	9298	7500	9500	
<b>00-06 1500 Suburban 4WD</b>									
00-06 Suburban 1500 4WD			7196	9196			7500	9500	
00-06 Suburban 1500 4WD with Skyjacker® 6" Lift					7296	9296	7500	9500	
<b>92-98 Suburban 4WD, 6-Lug</b>									
92-98 Suburban 4WD, 6-Lug with 0-2.5" Lift			7122	9122			7800	9800	
<b>67-91 Suburban 4WD</b>									
67-91 Suburban 1/2 & 3/4 Ton 4WD	7055	9055			7220 (I)	9220 (I)	7000	9000	
<b>57-73 1/2, 3/4 &amp; 1 Ton Pickup 4WD</b>									
58-72 1/2, 3/4 & 1 Ton Pickup 4WD - Up to 3" Diameter Axle			7110	9110			7800	9800	
57-73 Dana 60 Axles 4WD - Up to 3" O.D.			7110	9110			7800	9800	
<b>DANA AXLES</b>									
<b>All Dana Axles 2.75-3.5" Axle Tubes</b>									
All Dana 30 Axles - Up to 2.75" Axle Tube			7100	9100			7900	9900	
All Dana 44 Axles - Up to 3" Axle Tube			7110	9110			7800	9800	
All Dana 60 Axles - Up to 3" Diameter			7110	9110			7800	9800	



# STEERING STABILIZERS

OEM REPLACEMENT, SINGLE & DUAL KITS								
	HEAVY DUTY OEM		SINGLE STABILIZER		DUAL STABILIZER		Single Cylinder used in kit without hardware	
	White	Silver	White	Silver	White	Silver	White	Silver
<b>DODGE</b>								
<b>03-15 2500 &amp; 3500 Ram 4WD</b>								
14-15 2500 Ram 4WD	7014	9014						
13-15 3500 Ram 4WD	7014	9014						
09-12 2500 & 3500 Ram 4WD					7239	9239	7000	9000
03-08 2500 & 3500 Ram 4WD	7013	9013			7213 (I)	9213 (I)	7000	9000
03-08 2500 & 3500 Ram 4WD (Update Kit)					7213UP	9213UP		
NOTES: Part# 7213UP or 9213UP is to be used when customer has replaced their 03-08 Dodge OEM drag link with the new OEM Heavy Duty Dodge drag link.								
<b>98-02 1/2, 3/4 &amp; 1 Ton Ram 4WD</b>								
98-01 1/2, 98-02 3/4 & 1 Ton Ram 4WD	7007	9007			7218 (I)	9218 (I)	7000	9000
98-01 1/2, 98-02 3/4 & 1 Ton Ram 4WD w/ Drop Pitman Arm	7017	9017			7218 (I)	9218 (I)	7000	9000
98-02 3/4 & 1 Ton Ram 4wd with 3 3/4 Axle Tube					7270	9270	7000	9000
<b>94-97 1/2, 3/4 &amp; 1 Ton Ram 4WD</b>								
94-97 1/2, 3/4 & 1 Ton Ram 4WD	7007	9007			7217 (P)	9217 (P)	7000	9000
94-97 1/2, 3/4 & 1 Ton Ram 4WD with Drop Pitman Arm	7017	9017			7217 (P)	9217 (P)	7000	9000
<b>60-93 1/2, 3/4 &amp; 1 Ton Pickup &amp; Ramcharger 4WD</b>								
60-93 1/2, 3/4 & 1 Ton Pickup & Ramcharger 4WD			7110	9110	7220 (I)	9220 (I)	7000	9000
<b>45-93 Power Wagon 4WD</b>								
45-93 Power Wagon 4WD with Larger than 3" Front Axle			7110	9110			7800	9800
<b>86-89 Raider 4WD</b>								
86-89 Raider 4WD			7100	9100			7900	9900
<b>54-71 1/2, 3/4 &amp; 1 Ton Pickup 2WD</b>								
54-71 1/2, 3/4 & 1 Ton Pickup 2WD with Straight Front Axle			7100	9100			7900	9900
KIT NOTES: (S1). Slim Body - 1.86" (I). In-Line Mounting. (P). Parallel Mounting. (B). Boot Not Included Due To Clearance Issues								
<b>FORD</b>								
<b>70-03 F-100, F-150 Pickup 4WD</b>								
97-03 F-150 Pickup 4WD with Skyjacker® 6" Lift					7297	9297	7500	9500
80-96 F-150 Pickup 4WD			7140	9140	7240 (P)	9240 (P)	7800	9800
70-79 F-100, F-150 Pickup 4WD	7030	9030					7800	9800
71-76 F-150 Pickup 4WD with No OEM Location			7110	9110	7240 (P)	9240 (P)	7800	9800
70-77 F-150 Pickup 4WD with OEM Location					7210	9210	7800	9800
77-79 F-100, F-150 Pickup 4WD					7210 (P)	9210 (P)	7800	9800
<b>50-96 F-100, F-150 Pickup 2WD</b>								
80-96 F-100, F-150 Pickup 2WD			7140	9140	7240 (P)	9240 (P)	7800	9800
50-64 1/2 Ton Pickup 2WD with Straight Axle			7100	9100			7900	9900
<b>59-15 F-250 &amp; F-350 Pickup 4WD</b>								
11-15 F-250 & F-350 Super Duty 4WD					7254 (I)A3	9254 (I)A3	7000	9000
05-10 F-250 & F-350 Super Duty 4WD with 4" Lift			7154	9154	7254 (I)	9254 (I)	7000	9000
05-10 F-250 & F-350 Super Duty 4WD with 6" Lift			7156	9156	7254 (I)	9254 (I)	7000	9000
99-04 F-250 & F-350 Super Duty 4WD	7099	9099	7199	9199	7299 (I)	9299 (I)	7000	9000
80-98 F-250 & F-350 IFS Pickup 4WD			7140 A3	9140 A3	7240 (P)A3	9240 (P)A3	7800	9800
86-98 F-350 Straight Axle Pickup 4WD			7110	9110	7240 (P)A3	9240 (P)A3	7800	9800
59-79 F-250 & F-350 Pickup 4WD (Except with Slave Cylinder PS)			7110	9110	7220 (I)A3	9220 (I)A3	7000	9000
KIT NOTE: A3. Must Have a Minimum of 3" Lift.								
<b>00-05 Excursion 4WD</b>								
00-05 Excursion 4WD	7099	9099	7199	9199	7299 (I)	9299 (I)	7000	9000
<b>83-97 Ranger 4WD, 2WD</b>								
83-97 Ranger 4WD, 2WD			7150	9150	7250 (P)	9250 (P)	7900	9900
<b>83-90 Bronco II 4WD</b>								
83-90 Bronco II 4WD			7150	9150	7250 (P)	9250 (P)	7900	9900
<b>83-90 Bronco II 2WD</b>								
83-90 Bronco II 2WD			7140	9140	7240 (P)	9240 (P)	7800	9800
<b>90-94 Explorer 4WD</b>								
90-94 Explorer 4WD			7150	9150	7250 (P)	9250 (P)	7900	9900
<b>90-94 Explorer 2WD</b>								
90-94 Explorer 2WD			7140	9140	7240 (P)	9240 (P)	7800	9800
<b>66-96 Bronco 4WD</b>								
80-96 Bronco 4WD			7140	9140	7240 (P)	9240 (P)	7800	9800
78-79 Bronco 4WD	7030	9030			7210	9210	7800	9800
70-77 Bronco 4WD	7030	9030					7800	9800
66-75 Bronco 4WD			7110	9110			7800	9800

# STEERING STABILIZERS

OEM REPLACEMENT, SINGLE & DUAL KITS								
	HEAVY DUTY OEM		SINGLE STABILIZER		DUAL STABILIZER		Single Cylinder used in kit without hardware	
	White	Silver	White	Silver	White	Silver	White	Silver
<b>INTERNATIONAL</b>								
<b>61-82 Scout 4WD, 2WD</b>								
69-82 Scout II, Terra & Traveler 4WD, 2WD			7110	9110			7800	9800
67-75 Scout 4, 6 & 8 Cylinder, 4WD, 2WD Includes Scout II			7110	9110			7800	9800
61-68 Scout 80 & 800 Series 4WD, 2WD (Except V8)			7100	9100			7900	9900
<b>60-75 Pickup, Travelall &amp; Metros 4WD, 2WD</b>								
60-75 1/2 & 3/4 Ton PU & Travelall 4WD, 2WD with Straight Axle			7110	9110			7800	9800
60-75 1/2 & 3/4 Ton Metros 4WD with Straight Axle			7110	9110			7800	9800
60-74 1/2 & 3/4 Ton Metros 2WD with Straight Axle			7100	9100			7900	9900
<b>ISUZU</b>								
<b>84-92 Pickup, Amigo, Rodeo, Trooper &amp; Trooper II 4WD</b>								
89-95 Amigo & Rodeo 4WD			7100	9100			7900	9900
89-91 Pickup 4WD			7100	9100			7900	9900
84-90 Trooper & Trooper II 4WD			7100	9100			7900	9900
<b>MITSUBISHI</b>								
<b>86-90 Montero 4WD</b>								
86-90 Montero 4WD			7100	9100			7900	9900
<b>JEEP</b>								
<b>41-15 JK, TJ, YJ, CJ 4WD</b>								
07-15 Wrangler JK, Rubicon 4WD	7003	9003			7203 (B)	9203 (B)	7500	9500
97-06 Wrangler TJ, Rubicon, Unlimited, Unlimited Rubicon 4WD	7009	9009	7119	9119	7219	9219	7400	9400
with Skyjacker Adjustable Track Bar and Stabilizer Assembly					7112	9112	7400	9400
*Check Stabilizer body to confirm replacement cylinder 4-digit number								
87-96 Wrangler YJ 4WD*	7009	9009	7109	9109	7200 (P)	9200 (P)	7400	9400
*Check Stabilizer body to confirm replacement cylinder 4-digit number								
76-86 CJ's 4WD*	7001	9001	7100	9100	7200 (P)	9200 (P)	7500	9500
*Check Stabilizer body to confirm replacement cylinder 4-digit number								
41-86 All CJ's (Except CJ's with Slave Cylinder Power Steering)			7100	9100	7200 (P)	9200 (P)	7900	9900
<b>47-01 Jeep SUVs 4WD, 2WD</b>								
84-01 Cherokee XJ Midsize 4WD, 2WD	7009	9009					7400	9400
74-83 Cherokee Full-Size 4WD	7005	9005					7000	9000
93-98 Grand Cherokee ZJ 4WD, 2WD	7009	9009					7400	9400
84-91 Grand Wagoneer Full-Size 4WD	7005	9005					7000	9000
84-90 Wagoneer XJ 4WD, 2WD	7009	9009					7400	9400
74-83 Wagoneer Full-Size 4WD	7005	9005					7000	9000
66-73 Jeepster/Commando 4WD			7100	9100			7900	9900
86-92 Comanche Pickup 4WD, 2WD	7009	9009					7400	9400
74-88 J10, J20 Pickup 4WD	7005	9005					7000	9000
63-73 Gladiator Series			7110	9110			7800	9800
47-63 Utility Series and Wagons			7110	9110			7800	9800
<b>PLYMOUTH</b>								
<b>54-93 B100, B200, B300, Trailduster 4WD</b>								
74-93 Trailduster 4WD			7110	9110	7220 (I)	9220 (I)	7000	9000
54-71 B100, B200, B300 4WD with Straight I-Beam Axle			7100	9100			7900	9900
<b>TOYOTA</b>								
<b>61-95 Pickup &amp; SUVs 4WD</b>								
86-95 Pickup & 4Runner 4WD			7186	9186			7900	9900
79-85 Pickup & 4Runner 4WD	7070	9070					7900	9900
84-85 Pickup & 4Runner 4WD			7175	9175	7276 (P)	9276 (P)	7900	9900
79-83 Pickup 4WD			7175	9175	7275 (P)	9275 (P)	7900	9900
61-82 LandCruiser 4WD			7160	9160			7900	9900
<b>SUZUKI</b>								
<b>79-91 Samurai, Santana, LJ10, SJ10, LJ413 4WD</b>								
79-91 Samurai, Santana, LJ10, SJ10LJ413 4WD			7100	9100			7900	9900
KIT NOTES: (S1). Slim Body - 1.86" (I). In-Line Mounting. (P). Parallel Mounting. (B). Boot Not Included Due To Clearance Issues								