

115460
115470
11-12 FORD
SUPER DUTY



115460
115470
11-12 FORD
SUPER DUTY

11-12 FORD SUPER DUTY

Side Vents Inserts - 2 Pc.

TOOLS REQUIRED:

Plastic Pry Bar
Small Flat Screwdriver

PARTS LIST

(2) Side Vent Inserts

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLATION. Auto makers offer varied models to each vehicle and occasionally manufacture more than one body style of the same model. To assure your part is correct; our tech department can be contacted at tech@trexbillet.com to verify fitment or assist with tech questions. All other inquiries can be directed to info@trexbillet.com. In the event you do not have internet access please call 1-800-287-5900.

Step 1 Side Vent Insert Installation

Remove the two factory side vents from the vehicle. You can use your hands to pull the vents from the fender or use a small plastic pry bar (Fig 1). Next remove the two halves of the factory vent, there are small latches around the side on the back, use a small flat screwdriver to pry the latches apart and separate the two halves (Fig 2). Now lay the two side vent inserts into the factory outer vent section, the tabs along the outside of the side vent inserts will be on the inside of the factory vent (Fig 3). With the vent inserts in the outer portion of the factory vent, reassemble the two sections of the factory vent, the vent inserts will be sandwiched between the two factory vent halves. Reinstall the finished vents back onto the vehicle. Installation complete.



Fig 1



Fig 2

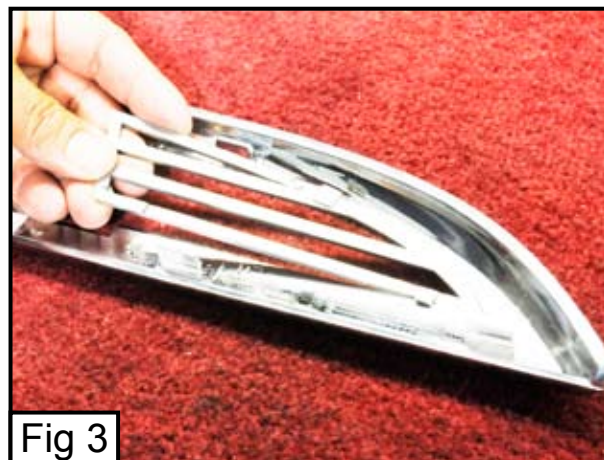


Fig 3