

# Part No. J028T


## Fits: Jeep Wrangler JK (2 Dr)

2007-2014

Qty	Part Description	Qty	Part Description
	•		•
1	Driver/Left Rocker Guard Assembly	4	8-1.25mm x 35mm Hex Bolts
1	Passenger/Right Rocker Guard Assembly	4	8mm Lock Washers
4	10mm Nut Plates	4	8mm x 28mm OD x 3mm Large Flat Washers
4	10-1.5mm x 35mm Hex Bolts	8	6-1.0mm x 25mm Hex Bolts
4	10mm Lock Washers	16	6mm x 22mm OD x 2mm Flat Washers
4	10mm x 34mm OD x 3mm Flat Washers	8	6mm Nylon Lock Nuts

### **TOLL FREE SUPPORT: 866 638 4870**

Install Time	: 60 – 180 Minutes	
(Professional Installation)		
Install Note	: Factory installed or aftermarket	
"rock rails," Side steps or running boards must be		
removed. Assistance is highly recommended.		

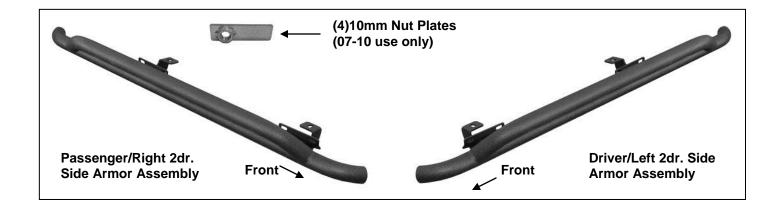


## **REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT**


### **READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION**

#### INSTALLATION PROCEDURE

 Start installation on the driver side of the vehicle. Determine if the vehicle has an open floor panel, (2007-10, Figure 1), or threaded holes in the floor panel, (2010-12, Figure 2), for the top tab on the Bracket.

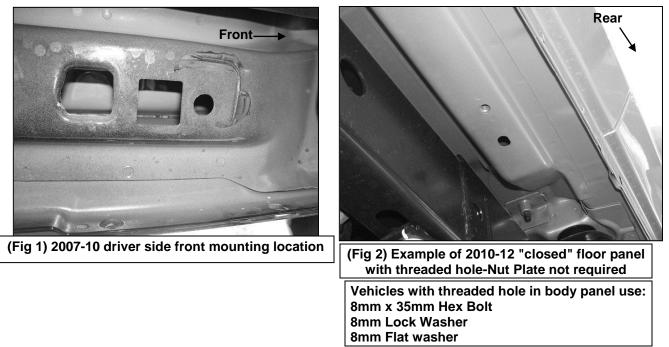


Vehicles with open mounting location: Insert (1) 10mm Nut Plate into the large square opening in the floor panel, (Figures 3, 4A & 4B). Line up the nut with the factory hole. IMPORTANT: To determine correct mounting hole to use, find the two holes in the pinch weld. Locate the mid point between the two holes, (Figure 3). Line up the threaded nut with the small hole directly in line with the mid point. This applies to front and rear mounting locations.

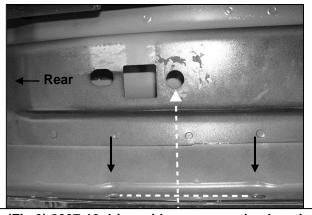

(Fig 3) 2007-10 driver side rear mounting location pictured. Locate the holes in the pinch weld to determine correct hole for 10mm Nut Plate


#### TOLL FREE SUPPORT: 866 638 4870

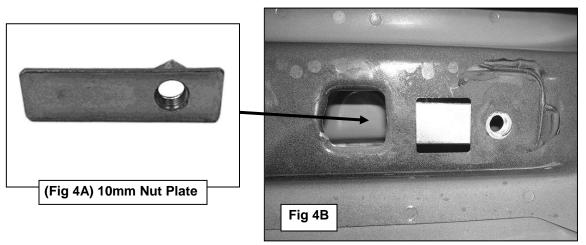


Bolt each top tab on the Rocker Guard to the Nut Plate with (1) 10mm x 35mm Hex Bolt, (1) 10mm Lock Washer and (1) 10mm Flat Washer, **(Figure 5)**.

**Vehicles with factory threaded holes in floor panel**: Bolt the tab on the Rocker Guard to the threaded hole in the floor panel with (1) 8mm x 35mm Hex Bolt, (1) 8mm Lock Washer and (1) 8mm Flat Washer, (Figures 2 & 5).

Line up the (2) vertical mounting plates on the Rocker Guard with the (4) factory holes in the pinch weld. Bolt the plates to the <u>back</u> of the pinch weld using the included (4) 6mm x 25mm Hex Bolts, (8) 6mm Flat Washers and (4) 6mm Nylon Lock Nuts, (Figures 5 & 6). Leave loose at this time.

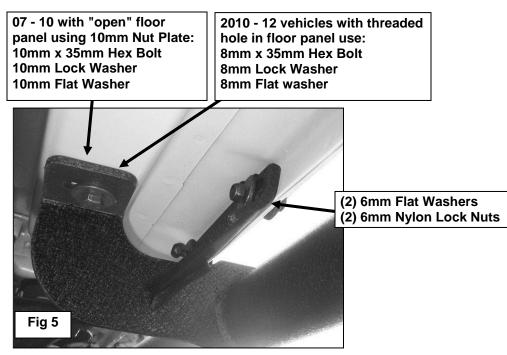

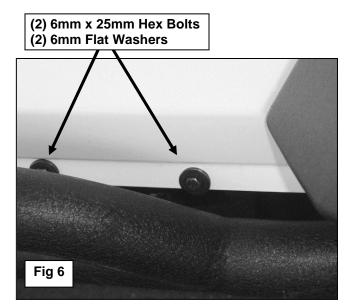

- **3.** Adjust the Rocker Guard and tighten all hardware.
- 4. Repeat Steps 1 3 for passenger side Rocker Guard installation.



Do periodic inspections to the installation to make sure that all hardware is secure and tight.

**To protect your investment**, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

**For stainless steel**: Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Sidebar.

For gloss black finishes: Mild soap may be used to clean the Products.

Keystone Automotive Operations Inc. (KAO) warrants this product to be free of defects in material and workmanship at the time of purchase by the original retail consumer. KAO disclaims any other warranties, express or implied, including the warranty of fitness for a particular purpose or an intended use. If the product is found to be defective, KAO may replace or repair the product at our option, when the product is returned prepaid, with proof of purchase. Alteration to, improper installation, or misuse of this product voids the warranty. KAO's liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for any incidental or consequential loss or damage.