



2008 KAWASAKI NINJA 250R UNDERTAIL INSTRUCTIONS

HOTBODIES RACING RECOMMENDS THAT YOU HAVE A PROFESSIONAL MECHANIC PERFORM THIS INSTALLATION. IF YOU CHOOSE TO "DO-IT-YOURSELF" ALWAYS TAKE APPROPRIATE SAFETY MEASURES WHEN INSTALLING THIS PRODUCT. CAREFULLY READ ALL INSTRUCTIONS BEFORE BEGINNING THE INSTALLATION PROCESS!



1. Remove seats and proceed to undo mounting bolts for the tail section. Also remove passenger foot pegs. Disconnect signal light and license plate light wires to remove tail light and mud flap completely



2. Remove bolt holding rear brake reservoir, and move reservoir out of way for installation. Make sure brake reservoir is upright to prevent any leaks. Also place cloth over reservoir bracket to prevent from scratching undertail during installation.



3. Remove bolts holding battery box to sub frame, to allow for easier access to trimming of battery box. Battery box will hang down.




4. Trim black plastic piece of the battery box. Trim both edges to clear new undertail fitment


READ CAREFULLY BEFORE INSTALLATION! This undertail like all undertails has been designed for off road racing use only, and has not been presented for D.O.T. certification! Hotbodies Racing Inc., our distributors, and our dealers will NOT be responsible for the use or misuse of this product. Always check with your local Department of Motor Vehicles before modifying any aspect of your motorcycle.



5. More photos of the trimming. Once you have trimmed the glove box. Install new undertail by lining up with trimmed battery box. Make sure everything is in place and holes are mounted up. Slide tail light into undertail.

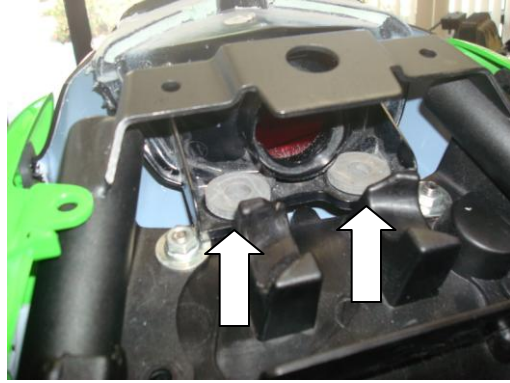

6. Once undertail is mounted on the sub frame, and battery box is bolted up; flip back part of tail light so that it rests on top of battery box. Once the undertail is secured the tail light will be pressed up against the battery box firmly and should not move.

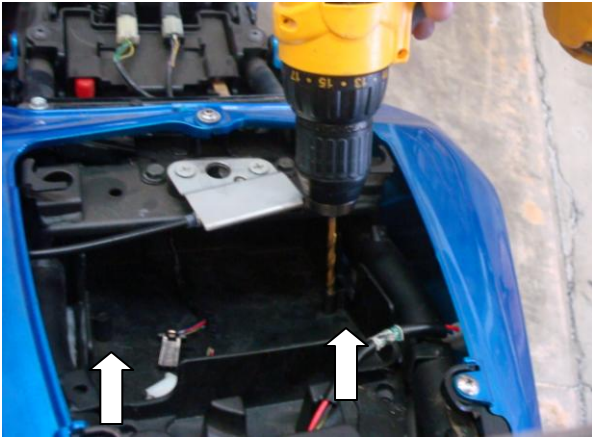

7. Drill out pop rivets through storage compartment, this will hold the pieces together, and will be the mounting location for your license plate.



8. Re-install all tail pieces.



9. Hold all stock pieces together once properly aligned install mounting bolts. Please note that this may require assistance in lining up holes of stock tail section due to snug fit.



10. Making sure all stock mounting bolts are secured re-install foot pegs, re-attach seat.

READ CAREFULLY BEFORE INSTALLATION! This undertail like all undertails has been designed for off road racing use only, and has not been presented for D.O.T. certification! Holbodies Racing Inc., our distributors, and our dealers will NOT be responsible for the use or misuse of this product. Always check with your local Department of Motor Vehicles before modifying any aspect of your motorcycle.



11. Your Done!

Wiring Instructions:

Using the blue clips, splice your turn signal wires to the signals in the undertail. On the bike; the green wire is the left turn, gray wire is the right turn and the black w/ yellow tracer wires are the grounds. On the undertail the red wires are the power wires and the black wires are the grounds