



## 2011-12 GSXR 600/750 Tag Bracket Instructions

HOTBODIES RACING RECOMMENDS THAT YOU HAVE A PROFESSIONAL MECHANIC PERFORM THIS INSTALLATION. IF YOU CHOOSE TO "DO-IT-YOURSELF" ALWAYS TAKE APPROPRIATE SAFETY MEASURES WHEN INSTALLING THIS PRODUCT. CAREFULLY READ ALL INSTRUCTIONS BEFORE BEGINNING THE INSTALLATION PROCESS!

### Parts List:

- 1 Main tag bracket
- 1 triangular insert with 3 holes
- 1 Mounting plate bracket with LED light in it
- 2 Blue wiring tap slices
- 1 Rubber well nut
- 1 Phillips head screw

### Tools List:

- 10mm wrench
- 5mm allen wrench
- Phillips head screwdriver




1) Remove stock fender bracket by first removing the 4 10mm bolts under the tail section.



2) Remove rider and passenger seats. You will have to pop off the side covers to access the 2 allen bolts for the rider seat.

**READ CAREFULLY BEFORE INSTALLATION!** This undertail like all undertails has been designed for off road racing use only, and has not been presented for D.O.T. certification! Hotbodies Racing Inc., our distributors, and our dealers will NOT be responsible for the use or misuse of this product. Always check with your local Department of Motor Vehicles before modifying any aspect of your motorcycle.

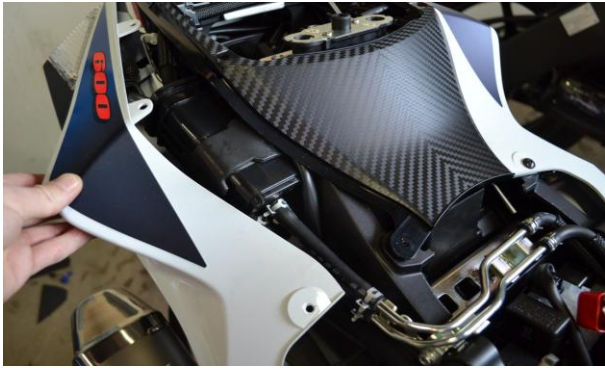


3) Remove 4 pop rivets on right side of tail located around the trunk compartment, underneath right side of tail section, and also the one phillips screw by the rider seat.



4) Locate white license plate light plug on the inside of the tail piece and unplug. Feed plug through hole in undertail and remove the stock fender.



5) Prepare the new tag bracket for installation. Insert flat piece w/3 holes into the main tag bracket. Use Rubber well nut to hold pieces together.

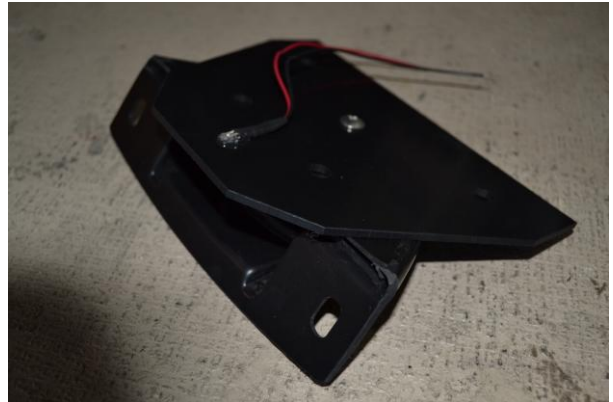

6) Line up the mounting plate w/LED license plate light over the tag bracket and secure snugly with the phillips screw provided.



7) Now that your Tag Bracket is ready for installation, feed the new wires through the existing holes for the plate light wires and secure tag using stock the 4 stock 10mm bolts. **DO NOT OVERTIGHTEN USE THREADLOCK!**



8) 2 of the 10mm mounting bolts will need to mounting from the inside of the tag bracket as shown. **DO NOT OVERTIGHTEN USE THREADLOCK!**

**READ CAREFULLY BEFORE INSTALLATION!** This undertail like all undertails has been designed for off road racing use only, and has not been presented for D.O.T. certification! Hotbodies Racing Inc., our distributors, and our dealers will NOT be responsible for the use or misuse of this product. Always check with your local Department of Motor Vehicles before modifying any aspect of your motorcycle.

9) Before putting the tail back together you need to wire the license plate light to the harness using the blue tap splices. Brown is positive and black/white is negative on the bike, and red is positive and black is negative on the tag bracket. Make sure to turn on the ignition to test the function of that light.



10) Re-install right side tail fairing using the 4 stock pop rivets 1 phillips screw. Re-install the rider and passenger seats as well as the covers to access the seat bolts and then attach your license plate and you're done!