




## Installation Instructions for Front Light Bar KC 7434 2006-11 Dodge Laramie 2500/3500

Thanks for choosing a KC HiLiTES product. We take pride in building the highest quality, best engineered systems possible. Your satisfaction with our product is important, so if you have any questions, please call our customer service line at 800-528-0950.

Note on Sport Model Trucks - The light bar will not mount correctly on sport model trucks without realigning the bumper.

### TRUCKS WITH FACTORY TOW HOOKS

1. Temporarily remove the factory tow hooks and set them aside along with the bolts.
2. Position your KC light bar so the brackets will sandwich between the tow hooks and the frame. (NOTE - The light bar must be rolled into place by inserting the lower end of the brackets into the opening first and then rolling it up into place.)
3. Using the factory bolts, re-install the tow hooks allowing the bolts to first go through the hooks, then the light bar and then the frame brackets. **DO NOT TIGHTEN.**
4. Align the light bar so it is centered in the opening then tighten all bolts.

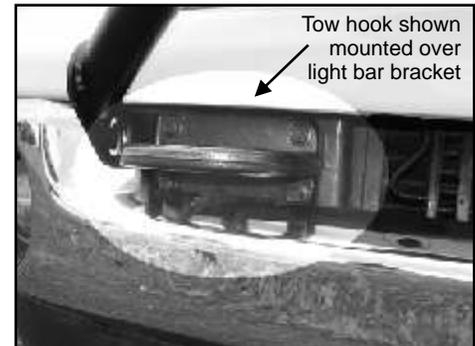

### TRUCKS WITHOUT FACTORY TOW HOOKS

1. Remove the plastic filler panels on each side of the opening in the middle of the bumper. (NOTE - Although tow hooks are not needed for installation of this light bar, they can be purchased at your local Dodge dealer if you wish to install them at this time).
2. Find the four holes on each side that will line up with the light bar brackets.
3. Install the KC light bar using the hardware supplied with this package. (NOTE - The light bar must be rolled into place by inserting the lower end of the brackets into the opening first and then rolling it up into place.) **DO NOT TIGHTEN.**
4. Align the light bar so it is centered in the opening then tighten all bolts.



**IF YOU HAVE ANY PROBLEMS  
OR QUESTIONS, PLEASE CALL  
CUSTOMER SERVICE AT 800-528-0950**