


S5248

11-14 FORD F150 3.5L ECOBOOST CAT

ABTD

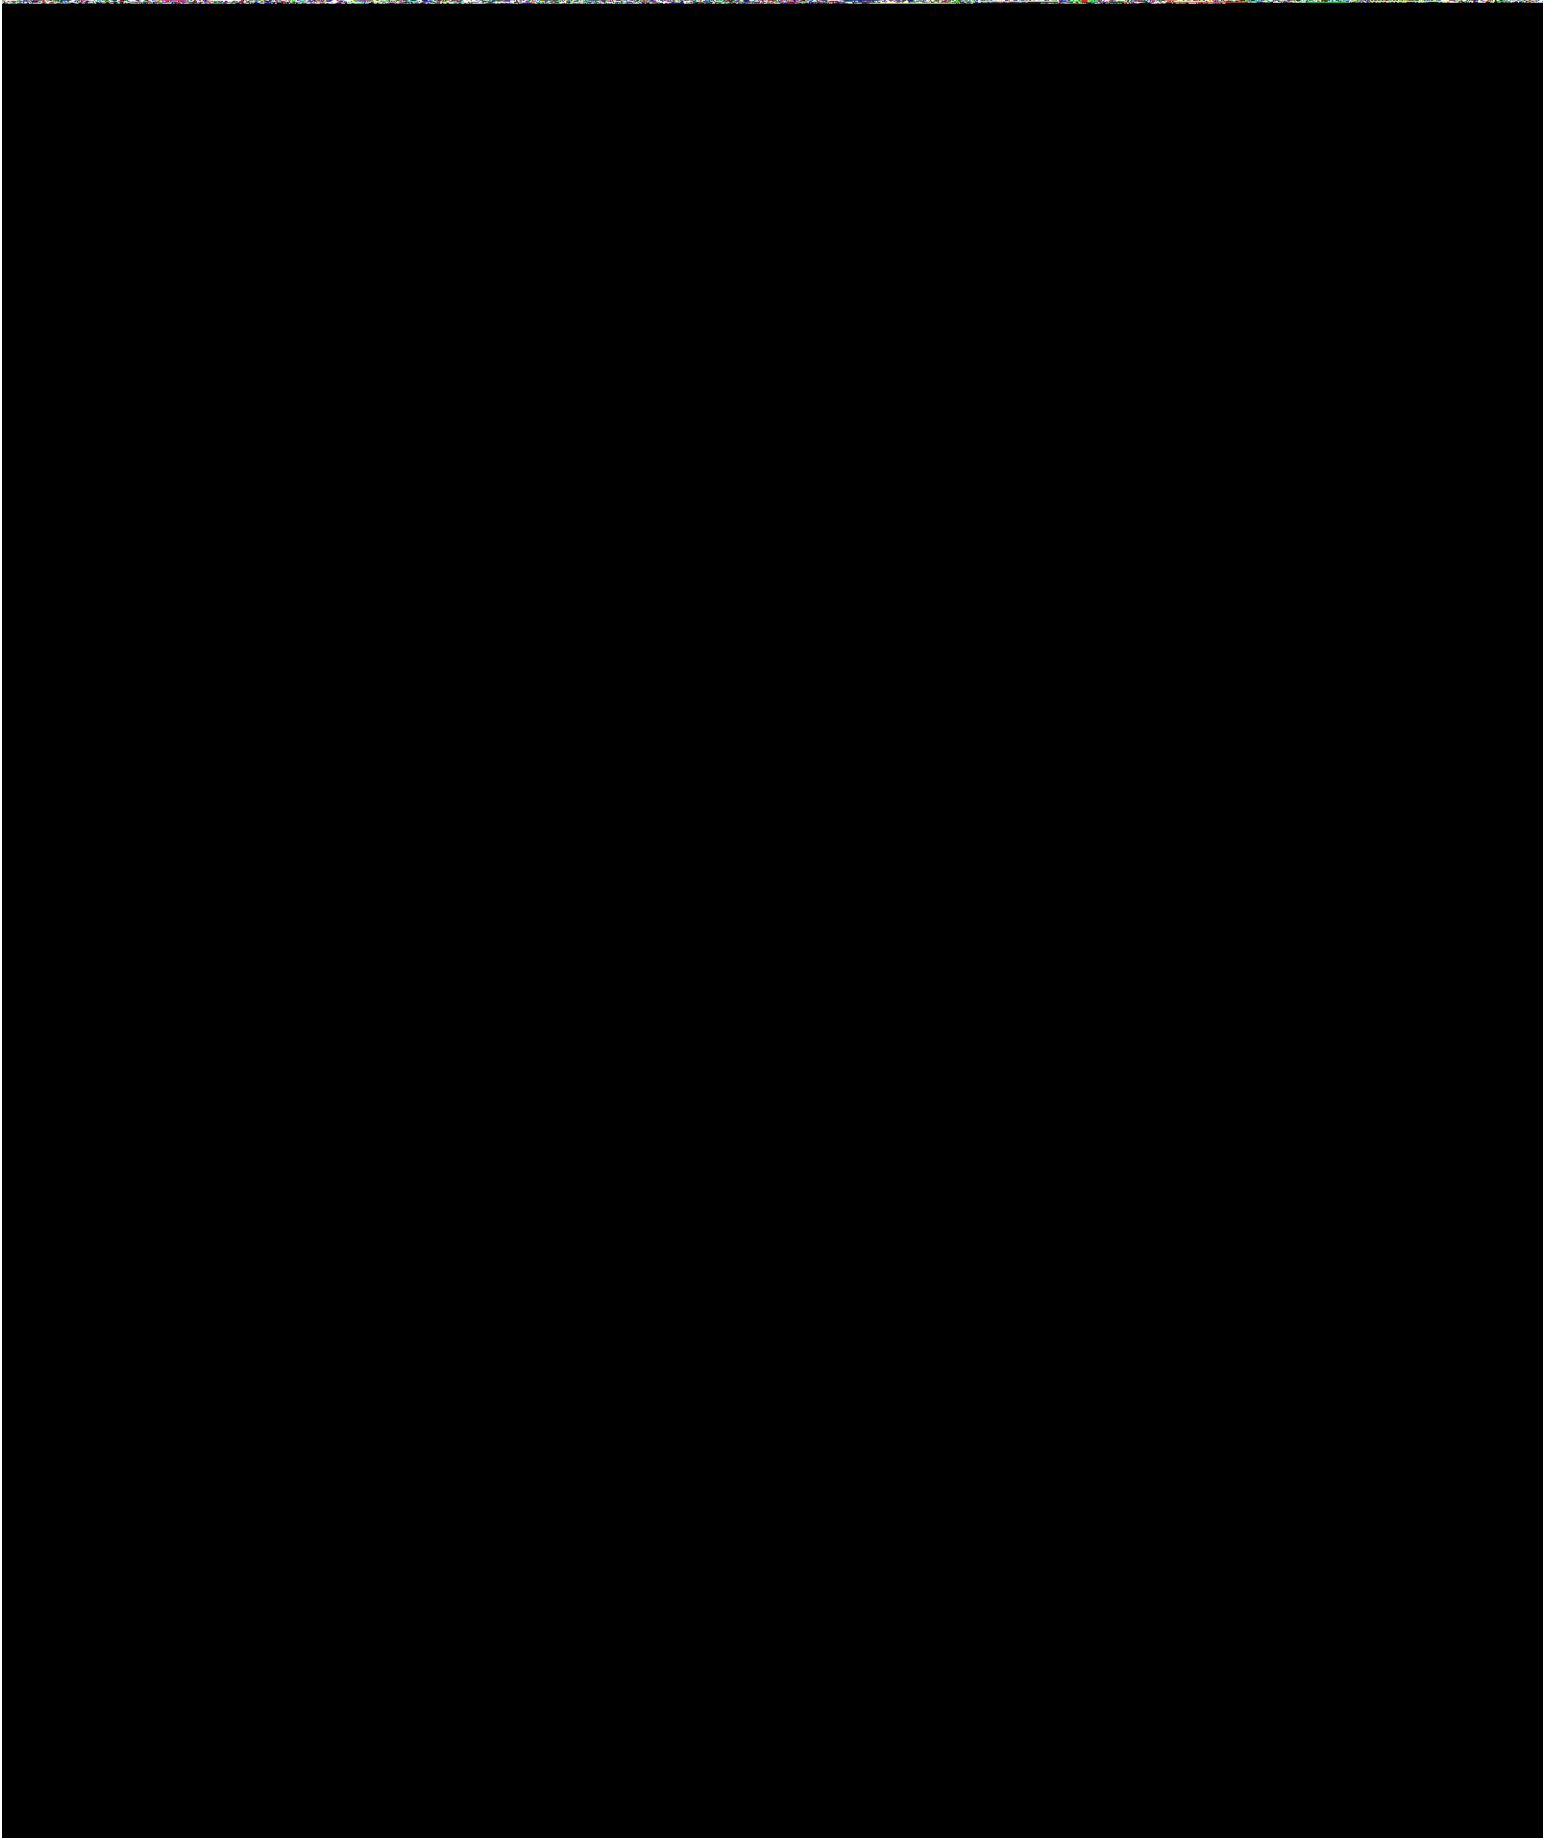

Removal of Stock System:

1. Apply a penetrating lubricant liberally to all exhaust fasteners, hangers and rubber insulators.
2. Loosen the flange located behind the “Y” pipe. **Refer to Figure 1.**
3. Loosen the clamp located in front of the muffler. **Refer to Figure 2.**
4. Remove the hangers from the rubber insulators and remove the exhaust from the vehicle. If a hoist or hydraulic lift is not being used the tail pipe may need to be cut to clear the rear axle. **Refer to Figure 3.**

Figure 1



Figure 2

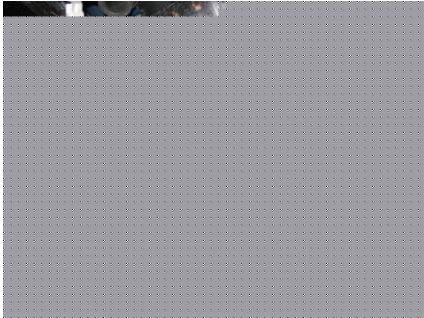


Figure 3



Figure 4

Installation of MBRP Inc. Performance Exhaust:

1. Install the **Front Pipe** to the existing flange using the fasteners provided. **Refer to Figure 4.**

Note: The **Extension Pipe** will not be required on some models.

Model	Bed Length	Wheelbase	Extension Pipe Required/ Length	Shortening Front Pipe Required
Regular Cab	6.5'	126"	No	-19"
Regular Cab	8'	145"	No	No
SuperCab	5.5'	133"	No	-11"
SuperCab	6.5'	145"	No	No
SuperCab	8'	163"	Yes	No
SuperCrew	5.5'	145"	No	No
SuperCrew	6.5'	157"	17"	No



Figure 5



2. Slide a **4" Clamp** over the **Front Pipe** and install the **Extension Pipe** onto the **Front Pipe**. Install the **4" Hanger Clamp** loosely to the **Extension Pipe** (or **Front Pipe** if the **Extension Pipe** is not required) and place the hanger into the foremost existing rubber insulator. **Refer to Figure 5.**



Figure 6

3. Slide a **4" Clamp** over the **Extension Pipe** or **Front Pipe** as required to attach the **Muffler**.

4. Loosely install the **Over Axle Pipe** connecting it to the **Muffler** outlet using a **4" Hanger Clamp** insert the hanger into the existing rubber insulator. **Refer to Figure 7.**



Figure 7

5. Attach the expanded end of the **Tail Pipe** and connect it to the **Over Axle Pipe** using a **4" Clamp**. Slide the **Tail Pipe** hanger into the factory rubber insulator. **Refer to Figure 8.**



Figure 8

6. Install and adjust the **Exhaust Tip** to suit. Tighten the lock bolt on the **Exhaust Tip**. **Refer to Figure 9.**

7. Align the exhaust as required. Starting at the front of the exhaust tighten all clamps and connections.

8. Check along the whole length of the exhaust system to ensure that there is adequate clearance around the spare tire, fuel and brake lines or any wiring. If any interference is detected relocate or adjust.



Figure 9

Congratulations! You are ready to begin experiencing the improved power, sound and driving excitement of your MBRP Inc. performance exhaust system. We know you will enjoy your purchase.