

44110
07-12 CHEVY
1500 SILVERADO



44110
07-12 CHEVY
1500 SILVERADO

2 PC SPORT SERIES GRILLE

Recommended Tools:

Phillips / Slotted Screwdrivers


Parts List / Hardware:

2 Sport Series Inserts (Top and Bottom)
16 Snap Brackets

Read and understand instructions before attempting installation

Step 1

Test fit the grilles into the openings. Remove the radiator cover from the vehicle; then the four 10mm bolts along the top of the grille. This will allow access to the rear of the grille.

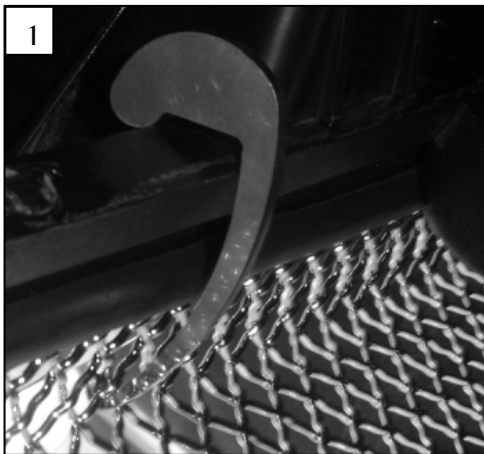

Step 2

Center the top grille into the opening of the grille shell. Install the snap brackets to the mesh using the smaller ends of the brackets. The larger end will snap to the factory grille plastics (1). Be sure to spread the brackets evenly around the perimeter of the grille. Repeat this on the lower insert.

Step 3

Re-install the grille assembly and radiator cover back onto the vehicle.

Thank you for purchasing your T-Rex billet grille. 9/17/08