



Protecting Your Adventure Lifestyle

Warrior Products, Inc.
16850 SW Upper Boones Ferry Rd
Ste. A
Durham, OR 97224
Phone (888) 220-6861
Fax (503) 692-0364
sales@warriorproducts.com

ALUMINUM HALF DOORS INSTALLATION INSTRUCTIONS

902DOOR CJ5 1955 to 1975

905DOOR CJ5 1976 to 1985

Read all instructions before proceeding

1. Assemble door paddle handles into their respective sides with hardware provided. Insert the latching mechanism in through from the front side and with the mechanism towards the back of the Jeep. The pivoting striker latch must be in the down orientation.
2. Apply the foam moulding to the lower inside edge of each door. (See Diagram 'A')

3. **Installing the door hinges (902DOOR only).**

Slide the hinges onto the door pins and temporarily hold them into place with some tape. Set the door centered within the tub opening and mark the locations where you will need to drill the holes. Once you are satisfied with their placement, drill the holes and mount the upper and lower hinges on the outside of the tub utilizing the hardware provided.

NOTE: 905DOOR uses the factory hinges.

4. Hang the doors on the Jeep to check for proper fitment.

5. Assemble the striker bracket and place on top of the body tub rail so that the paddle handles' latch engages the striker pin. Make any vertical adjustments to the pin so that the bracket lies flat on the body tub rail. Mark the mounting locations through the bracket, set the bracket aside and drill the 3/8" holes. Mount the bracket on the tub rail making certain the alignment is correct. The door should open and close smoothly if properly installed.

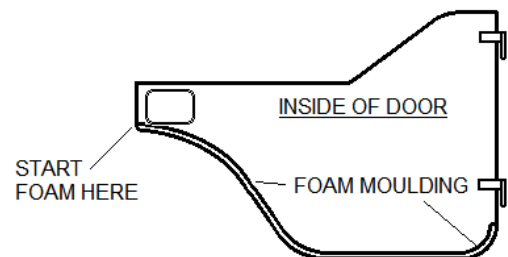


DIAGRAM 'A'

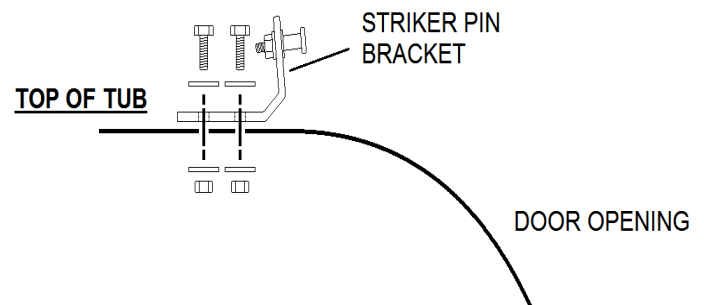


DIAGRAM 'B'

THANK YOU FOR PURCHASING WARRIOR PRODUCTS

If you need further assistance installing your product, please contact us by email at techsupport@warriorproducts.com or call us at (888) 220-6861.

QUALITY



INTEGRITY



INNOVATION



SERVICE