


TERAFLEX

INSTALLATION GUIDE

Installation Guide for the YJ BellyUp Skidplate Kit Part #004648400(BUY)

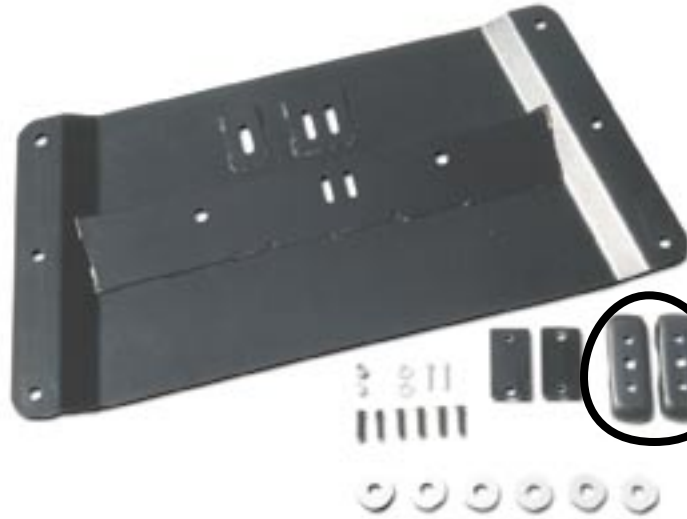

** Spring purchases not included in kit. Available from TeraFlex

Think safety first when installing this kit. The installation of this kit will require use of the TeraFlex 231SS (Part #004444401) or equivalent.

Component list

Please check the components in your kit prior to beginning installation. Each kit should include:

- | | |
|------------------------|-----------------------------------|
| 1- Belly Up Skid Plate | 6- 1/2" x 1/5" Buttonhead bolts |
| 2- Engine Mount Nuts | 2- 3/8" washer |
| 2- 1/2" lock washer | 2- 10mm x 55mm bolt |
| 2- Motor Mount Spacers | 6- 1/2-inch transfer case spacers |

Warning:

***This product is not inclusive in and of itself.
DO NOT attempt to install this product unless you have or will have modified the following components:***

- a. transfer case slip yoke eliminator kit with constant velocity (CV) type rear drive shaft.***
- b. body lift - One-inch for 2.5L engines and six-cylinder YJs with automatic transmissions. Two-inch for six-cylinder YJs with manual transmissions.***
- c. This kit may require longer, "anti-spring-wrap" type purchases which will require welding on the axle tube. You must remove your old purchases and replace them.***

This product does and will effect drive shaft angle and may cause drive shaft vibration.

Tera Manufacturing, Inc.
5251 South Commerce Dr.
Murray, Utah 84107
Phone/801.288.2585
Fax/801.713.2313
www.teraflex.biz

Installation considerations

Exhaust alignment - Check exhaust alignment and adjust as necessary.

Driveshaft clearance - We recommend allowing at least one inch of clearance for the driveshaft.

Check driveshaft length - If a longer driveshaft is required, Tera offers one inch longer yokes for use with TeraLow driveshafts. Please contact the manufacturer of your driveshaft for longer yokes to fit your application if you don't already have one.

Shift Linkage Adjustment - Check the shifting linkage and adjust if needed.

Body Lift - Automatics and four cylinder manuals will need at least a one-inch body lift. Six cylinder manuals will require a two-inch body lift.

Drive shaft vibrations - If drive shaft vibrations occur, adjust axle pinion angle for proper drive shaft angles, and/or shim down the skid plate.

Spring purches - Spring purches may be needed to correct pinion angles and must be welded in place. TeraFlex offers longer spring purches for this purpose (Part #004959300).

Motor mount spacers - When installing the motor mount spacers, it will be necessary to redrill the hole to accomodate the special nut used on this kit. A 1/2-inch drill bit will be adequate, but a 9/16-inch bit would make installation easier.

