SS-2 / SS-2P / SS-2X / SS-2PX

ATV INSTALLATION INSTRUCTIONS


A. Any variations from these installation instructions could have an adverse effect on the performance of the fairing or negate any present or future warranty.

NO.1. SUPPORT ROD INSTALLATION

- A. Interlocking handlebar clamps are mounted to the handlebars. Positioning of these knuckles may vary depending on the configuration of the handlebars. Do not tighten bolts completely as shield may have to be adjusted.
- B. Support rods may be mounted on either front or back side of the handlebars. Rods should be positioned so top long bend is in the upper position as shown to right.


NO.2. SHIELD INSTALLATION


With the barrels on the upper support rods, (2 barrels per rod), hold the shield in position on the bike and align the barrels to the mounting holes in the fairing. Assemble in this order: (a) Screw, (b) Shield, (c) Washer, (d) Barrel - as shown below.

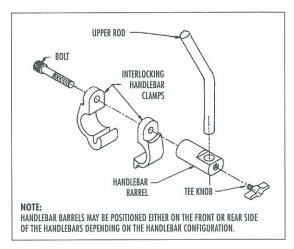





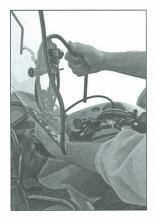

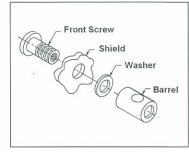

NO.3. FINAL ADJUSTMENTS

- A. Adjust fairing for desired height by sliding barrels up and down rods. Lock tight with tightening knobs in the rear of the barrel. See Above.
- B. Ensure all hardware is tightened snugly and enjoy your windscreen.

MFG. SUGGESTS USING LOCTITE™ ON ALL FASTENERS TO PREVENT LOOSENING FROM VIBRATION

NO.4. CLEANING THE SHIELD

Use Slipstreamer Cleaner/Polish for daily cleaning and refreshing. It is available at your Slipstreamer Dealer. Wash with a mild soap or detergent and lukewarm water. Use a clean soft cloth or sponge. Rinse well and blot dry with a damp cloth or chamois. (100% cotton cloth is preferable)

"NEVER USE ABRASIVE CLEANERS, HOUSEHOLD CLEANERS, WINDOW-CLEANING FLUIDS, SCOURING COMPOUNDS, GRITTY CLOTHS, OR STRONG SOLVENTS SUCH AS ALCOHOL, ACETONE, CARBON TETRACHLORIDE, ETC."

MANUFACTURED BY

