



*Truck and Jeep Accessories*



**GO EVERYWHERE**

Like Us



Share Us



Watch Us



Follow Us



*Truck and Jeep Accessories*

## INSTALLATION INSTRUCTIONS



### 2016-18 Nissan Titan XD 2" Leveling Kit KN09108BK

[www.DaystarWeb.com](http://www.DaystarWeb.com)  
Tech Support Contact Info  
[Tech@DaystarWeb.com](mailto:Tech@DaystarWeb.com)  
Phone: 623.907.0081  
Fax 623.907.0088  
841 S 71st Ave  
Phoenix AZ 85043

Instruction Sheet P21866  
©2016 Daystar Products

Revision 2  
Revision: Date 06-03-16  
Revised by: MS

## Introduction

**Daystar Products** is your number one source for Made in the USA quality vehicle accessories. Now backed with our exclusive GO EVERYWHERE® Lifetime Limited Warranty (see terms at DaystarWeb.com). To ensure your safety and proper installation of this product, take a moment to read all instructions and product safety information BEFORE attempting to install your **Daystar** product. If you have technical questions after reading these instructions we are here to help. Contact us at 800-595-7659.

## Product Safety Information

Throughout these instructions important safety information is generally preceded by one of the three signal words indicating the relative risk of injury. The signal words are as follows:

**!WARNING** A hazardous situation which, if not avoided, could result in serious injury or death. You can be seriously injured or killed if you don't follow instructions.

**!CAUTION** A hazardous situation which, if not avoided, could result in minor or moderate injury. You can be moderately injured and also may suffer property damage if you don't follow instructions.

**NOTICE** Careful attention is required to this instruction or operation but this does not generally relate to personal injury. Damage to your product or other property may result if you don't follow instructions.

### **!Warning**

Familiarize yourself with all vehicle manufacturer and **Daystar** warnings, instructions, and limited warranties before driving your modified suspension vehicle. Also, be aware that many states/countries have laws governing on-road vehicle heights and modifications. You are responsible for ensuring the safety and legality of your vehicle. A summary of current state vehicle laws is available at [www.sema.org](http://www.sema.org).

## Daystar® Go Everywhere Lifetime Limited Warranty

Your Daystar Comfort Ride™ or Budget Boost™ leveling kit is covered by the following **Go Everywhere Lifetime Limited Warranty** provided exclusively by Daystar Products International, Inc., 841 South 71st Ave., Phoenix, AZ 85043 ("Daystar").

**What is Covered? Real Life Use, Off Road & On:** Subject to the terms, exclusions and limitations herein, Daystar warrants to the initial retail purchaser that your Comfort Ride™ or Budget Boost™ leveling kit shall be free of defects in material and workmanship for so long as it is properly installed on a single vehicle owned by the initial retail Daystar purchaser.

**What is Not Covered? Your Vehicle & Parts That Are Not Daystar's Go Everywhere:** Your Daystar Limited Warranty does not cover: (a) damage to your vehicle, vehicle systems (ex. electronic stability control), other products, components or property not manufactured by Daystar to our exclusive Go Everywhere standards, (b) customer choice of vehicle configuration/tire and wheel combinations contrary to Daystar recommendations, warnings or applicable laws, (c) Acts of God, weather, corrosion, accidents, theft, vandalism, negligent misuse or intentional damage, other exclusions under your OEM Limited Warranty.

**Remedy Limited to Repair/Replacement. Get back on your favorite trail fast:** The exclusive remedy provided hereunder shall, upon Daystar's inspection and option, be either repair or replacement of the Comfort Ride™ or Budget Boost™ leveling kit or parts covered under this Limited Warranty. Call us at 623-907-0081 and we will get you back wheelin'. All labor, removal, shipping and installation costs are the customer's responsibility.

**Other Exclusions – Limitation of Damages - Your Rights Under State Law. (Stuff Lawyers Say):** At Daystar, we aren't big fans of lawyers, even ours. Still, he says our Limited Warranty has to include this stuff. In consideration of the purchase price paid, neither Daystar nor any independent Daystar distributor or repair person are responsible for any time loss, loss of vehicle use, rental costs, transportation, labor or for any incidental, consequential, punitive or other damages you may have or incur in connection with any part or product purchased. No Daystar employee or independent distributor is authorized to make any statement or representation altering the terms of Daystar's Go Everywhere Lifetime Limited Warranty. Your exclusive remedy hereunder for covered parts is repair/replacement as described above. This Limited Warranty gives you specific rights. You may also have other rights that vary from state to state. For example, some states do not allow limitations of how long an implied warranty lasts and/or do not allow the exclusion or limitation of incidental or consequential damages, so the limitations and exclusions herein may not apply to you.


All other warranties are hereby disclaimed, except to the extent prohibited by applicable law in which case any implied warranty of merchantability, fitness for a particular purpose or other implied warranty are limited to a period of four (4) years from date of initial retail purchase. Daystar reserves the rights to: (a) require invoice or other proof of purchase; (b) make future revisions to these products and Limited Warranty without prior notice or obligation to upgrade your Daystar product.

©2016 Daystar Products International, Inc. All rights reserved.





Truck and Jeep Accessories

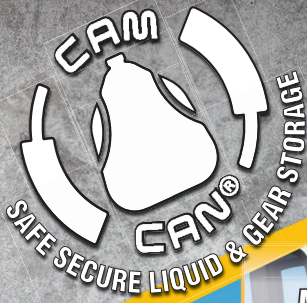

# CAM CAN® LIQUID & GEAR STORAGE

MOUNTS  
JUST ABOUT  
ANYWHERE



ROLL BAR  
SPARE TIRE  
FLAT SURFACE



Each Cam Can® holds 2 gallons

### MOUNTS JUST ABOUT ANYWHERE!



COLOR		USAGE	
RB		WATER	
BK	TN	BG	GN
BK	TN	BG	OR
		LIQUIDS	
		TRAIL BOX	

[www.CAMCANS.com](http://www.CAMCANS.com)

**!Warning:** Always work with appropriate personal safety gear including safety glasses, gloves, and hearing protection if using air-powered tools.

## INSTRUCTIONS

### Tools Required

- Wrench and Socket Set - 1
- Floor Jack - 1
- Jack Stand - 2+


### Bill of Materials

- M03875 Top Spacer - 2
- S11134 Stud Extender - 6
- PL153 Red Loctite - 1

**IMPORTANT NOTE:** The advertised amount of lift that this kit provides and the thickness of the spacers supplied will not be the same! For example, this 2" lift will only have 1-1/4" thick spacers. The reason for the difference between the spacer thickness and the amount of lift has to do with suspension geometry. There is a ratio involved, and it is this ratio that determines the thickness of the spacers. Rest assured, installing the spacer supplied will result in the proper amount of lift out at the wheel.

1. Layout all parts and check quantities against the Bill of Materials. Completely read instructions before beginning installation.
2. Do not install the kit on another lift or altered suspension.
3. Jack the front of the vehicle in accordance to manufacturer recommendation and support with jack stands so that the front two tires are off the ground

4. Remove the front tires/wheels.
5. Remove sway bar links from lower control arm.
6. Remove upper ball joint nut and remove spindle from upper A-arm.
7. Remove 3 upper strut nuts on the strut tower on each side of vehicle that holds strut assembly to the strut tower (**Hint:** Leave one nut on to prevent the strut from dropping out in the next step.)
8. Remove lower strut bolt from the lower control arm and remove the strut assembly from vehicle. **Note the direction of the bolt for reinstallation.**
9. Install Daystar spacer using supplied stud extensions. Use supplied Loctite® on stud extensions.
10. Install the strut assembly into the strut tower using the original hardware using the supplied Loctite® on the upper strut nuts.
11. Install the lower strut bolt in the original position that it was removed.

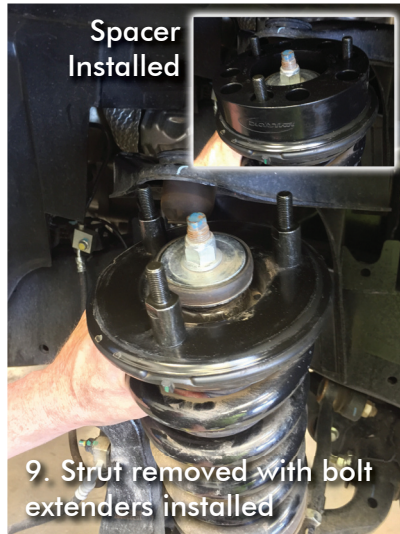

12. Using the floor jack, raise the lower control arm and connect the upper ball joint on the upper control arm to the spindle. Torque per OEM specifications.
13. Reconnect the sway bar end links to lower control arm. Torque per OEM specifications.
14. Install the front tires/wheels.
15. Lower the vehicle onto the ground and torque all nuts and bolts to OEM specifications.
16. Have wheel alignment done after installation.
17. Re-torque all bolts after 500 miles.

### **!WARNING**

This vehicle has been modified to enhance its performance. The steering, braking and handling of this vehicle will differ from standard passenger cars and trucks; this vehicle handles differently from an ordinary vehicle in driving conditions which may occur on streets, highways and off road. Avoid unnecessary abrupt maneuvers, sudden stops, sharp turns and other driving conditions that could cause loss of control, possibly leading to a roll over or other accident that could result in serious injury or death to driver and passengers. If larger tires are installed the speedometer will read lower than the vehicles actual speed.

### **DRIVE WITH CARE, REDUCE SPEED AND WEAR SEAT BELTS AT ALL TIMES.**

Do not combine with any other suspension kit.  
This kit should be installed by a professional mechanic.